SERIES 5

Plasma TV

user manual

imagine the possibilities

Thank you for purchasing this Samsung product.
To receive more complete service, please register your product at

www.samsung.com/register

Model _____ Serial No. _____

SAMSUNG

User Instructions

- **Screen Image retention**
  Do not display a still image (such as on a video game or when hooking up a PC to this PDP) on the plasma monitor panel for more than 2 hours as it can cause screen image retention. This image retention is also known as “screen burn”. To avoid such image retention, reduce the degree of brightness and contrast of the screen when displaying a still image.

- **Height**
  The PDP can normally operate only under 2000m in height. It might abnormally function at a place over 2000m in height so do not install and operate there.

- **Heat on the top of the PDP TV**
  The top side of the product may be hot after long period of use as heat dissipates from the panel through the vent hole in the upper part of the product. This is normal and does not indicate any defect or operation failure of the product. However, children should be prevented from touching the upper part of the product.

- **The product is making a ‘cracking’ noise.**
  A ‘cracking’ noise may occur when the product contracts or expands due to a change of surrounding environment such as temperature or humidity. This is normal and not a defect of the unit.

- **Cell Defects**
  The PDP uses a panel consisting of 2,360,000 (HD-level) to 6,221,000 (FHD-level) pixels which require sophisticated technology to produce. However, there may be few bright or dark pixels on the screen. These pixels will have no impact on the performance of the product.

- **Avoid operating the TV at temperatures below 5°C(41°F)**

- **A still image displayed too long may cause permanent damage to the PDP Panel.**
  
  Watching the PDP TV in 4:3 format for a long period of time may leave traces of borders displayed on the left, right and centre of the screen caused by the difference of light emission on the screen. Playing a DVD or a game console may cause similar effect to the screen. Damages caused by the above effect are not covered by the Warranty.

- **Afterimage on the Screen.**
  Displaying still images from Video games and PC for longer than a certain period of time may produce partial afterimages.
  To prevent this effect, reduce the ‘brightness’ and ‘contrast’ when displaying still images.

- **Warranty**
  - Warranty does not cover any damage caused by image retention.
  - Burn-in is not covered by the warranty.

- **Installation**
  Be sure to contact an authorized service centre, when installing your set in a location with heavy dust, high or low temperatures, high humidity, chemical substance and where it operates continually such as the airport, the train station etc. Failure to do so may cause a serious damage to your set.

Digital TV (DVB-T) Notice

1. Functionalities related to Digital TV(DVB) are only available in countries/areas where DVB-T (MPEG2 and MPEG4 AVC) digital terrestrial signals are broadcasted or where you have access to a compatible DVB-C(MPEG2 and MPEG4 AAC) cable-TV service. Please check with your local dealer the possibility to receive DVB-T or DVB-C signal.
2. DVB-T is the DVB European consortium standard for the broadcast transmission of digital terrestrial television and DVB-C is that for the broadcast transmission of digital TV over cable.
   However, some differentiated features like EPG (Electric Program Guide), VOD (Video on Demand) and so on, are not included in this specification. So, they cannot be supported at this moment.
3. Although this TV set meets the latest DVB-T and DVB-C standards[August,2008], the compatibility with future DVB-T digital terrestrial and DVB-C digital cable broadcasts cannot be guaranteed.
4. Some cable-TV providers may charge an additional fee for such a service and you may be required to agree to terms and conditions of their business.
5. Some Digital TV functions might be unavailable in some countries or regions and DVB-C might not work correctly with all providers.
6. For more information, please contact your local Samsung customer care centre.

© 2009 Samsung Electronics Co., Ltd. All rights reserved.

Contents

Connecting and Preparing Your TV

- Checking Parts 4
- Using the Stand-Base 4
- Assembling the Cables 4
- Viewing the Control Panel 5
- Viewing the Connection Panel 6
- Remote Control 7
- Installing Batteries in the Remote Control 8
- Switching On and Off 8
- Placing Your Television in Standby Mode 8
- Viewing the Menus 9
- Using the TOOLS Button 9
- Plug & Play Feature 10

Channel Control

- Storing Channels 11
- Managing Channels 13

Picture Control

- Changing the Picture Settings 15
- Setting up the TV with your PC 18
- PC Display 19

Sound Control

- Changing the Sound Setting 20
- Selecting the Sound Mode 21

Function Description

- Configuring the Setup Menu 22
- Setting the Time 24
- Source List / Edit Name 25
- Supported Program 26

Media Play

- Connecting a USB Device 27
- Using the Media Play Function 28
- Using and Sorting Photo List 29
- Viewing a Photo or Slide Show 30
- Using and Sorting the Music List 31
- Playing a Music 32
- Picture / Music Settings Using Media Play 33
- Using the Setup Menu 33

About Anynet+

- Connecting Anynet+ Devices 34
- Setting Up Anynet+ 35
- Scanning and Switching between Anynet+ Devices 35
- Recording 36
- Listening through a Receiver (Home theater) 37
- Troubleshooting for Anynet+ 37

Recommendations for Use

- Teletext Feature 38
- Wall Mount Kit Specifications (VESA) 39
- Preparing before installing Wall- Mount on the wall 40
- How to assemble the Stand-Base (depending on the model) 40
- Securing the TV to the Wall 41
- Securing the Installation Space 41
- Troubleshooting 42
- Specifications 45
- Software License 46

Symbol	Press	Note	One-Touch Button	TOOLS

Connecting and Preparing Your TV

Checking Parts

Owner's Instructions

Remote Control/
AAA Batteries (2ea)

Power Cord

Cloth-Clean

Holder-Ring (4ea)
(Refer to page 40)

Holder-Wire Cable

Screw (4ea)
(PS50B550 only)



Cover-Bottom
(PS50B550 only)

Cover-Bottom /
Screws (2ea)
(PS58B550 only)

Ferrite Core for
Power Cord

Ferrite Core fo
Headphone

Ferrite Core (Power Cord, Headphone)
The ferrite core is used to shield the cable from interference. When connecting a cable, open the ferrite core and clip it around the cable near the plug as shown in the figure.

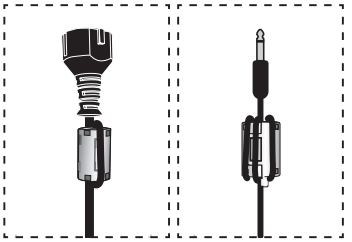

Using the Stand-Base

- Two or more people should carry the PDP. Never lay the PDP on the floor because of possible damage to the screen. Always keep the PDP upright.
- The PDP can rotate 20 degrees in right and left directions.

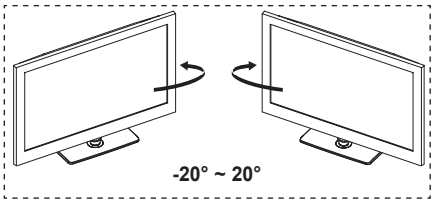

Assembling the Cables

Enclose the cables in the Holder-Wire Cable so that the cables are not visible through the transparent stand.

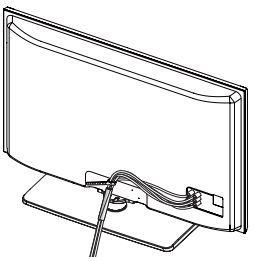

Viewing the Control Panel

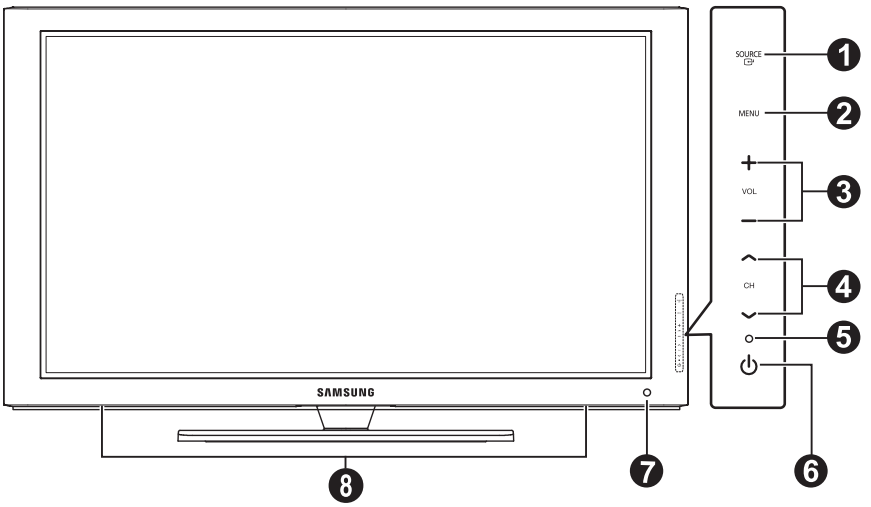

Front Panel buttons

Touch each button to operate.

The product colour and shape may vary depending on the model.

❶ **SOURCE**
Toggles between all the available input sources (**TV**, **AV1**, **AV2**, **Component1**, **Component2**, **PC**, **HDMI1**, **HDMI2/DVI**, **HDMI3**, **HDMI4**, **USB**).

In the on-screen menu, use this button as you would use the **ENTER** button on the remote control.

❷ **MENU**
Press to see an on-screen menu of your TV's features.

❸ **+ VOL –**
Press to increase or decrease the volume. In the on-screen menu, use the **+ VOL –** buttons as you would use the ◄ and ► buttons on the remote control.

❹ **∧ CH ∨**
Press to change channels. In the on-screen menu, use the **∧ CH ∨** buttons as you would use the ▲ and ▼ buttons on the remote control.

❺ **POWER INDICATOR**
Lights up when the power is on.

❻ **⏻ (POWER)**
Press to turn the TV on and off.

❼ **REMOTE CONTROL SENSOR**
Aim the remote control towards this spot on the TV.

❽ **SPEAKERS**

Viewing the Connection Panel

TV Rear Panel

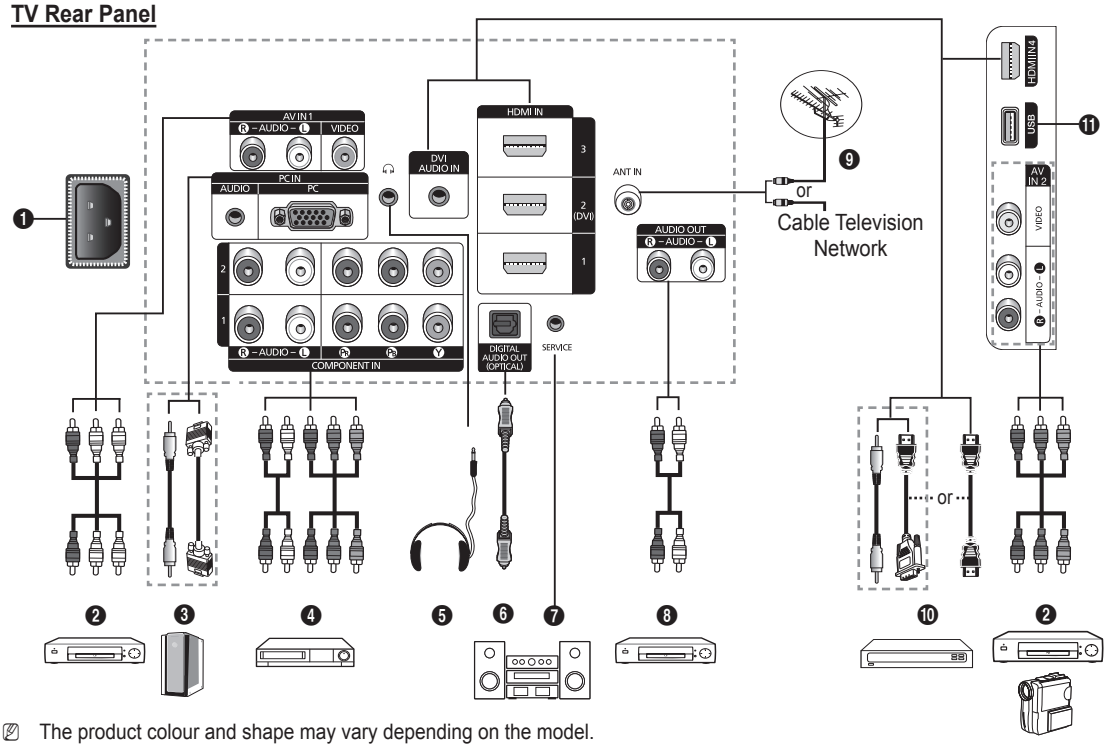

The product colour and shape may vary depending on the model.

Whenever you connect an audio or video system to your set, ensure that all elements are switched off.

When connecting an external device, match the colour of the connection terminal to the cable.

❶ **POWER IN**
Connect the supplied power cord.

❷ **AV IN 1, 2 (AUDIO R/L / VIDEO)**
Video and audio inputs for external devices, such as a camcorder or VCR.

❸ **PC IN (AUDIO / PC)**
Connect to the video and audio output jack on your PC.

❹ **COMPONENT IN 1, 2**
Audio (AUDIO L/R) and video (Y/P_B/P_R) inputs for Component.

❺ **HEADPHONES JACK**
You can connect a set of headphones if you wish to watch a television programme without disturbing the other people in the room.

Prolonged use of headphones at a high volume may damage your hearing.

❻ **DIGITAL AUDIO OUT (OPTICAL)**
Connect to a Digital Audio Component.

❼ **SERVICE**
Connector for service.

❽ **AUDIO OUT (AUDIO R/L)**
Connect RCA audio signals from the TV to an external source, such as Audio equipment.

❾ **ANT IN**
75Ω Coaxial connector for Aerial/Cable Network.

❿ **HDMI IN 1, 2(DVI), 3, 4**

- No additional Audio connection is needed for an HDMI to HDMI connection.
- When using an HDMI/DVI cable connection, you must use the HDMI IN 2 (DVI) jack.

What is HDMI?

- **High Definition Multimedia interface** allows the transmission of high definition digital video data and multiple channels of digital audio.
- The HDMI/DVI terminal supports DVI connection to an extended device with the appropriate cable (not supplied). The difference between HDMI and DVI is that the HDMI device is smaller in size, has the HDCP (High Bandwidth Digital Copy Protection) coding feature installed, and supports multi - channel digital audio.

DVI AUDIO IN
DVI audio outputs for external devices.

⓫ **USB**
Connect a USB mass storage device to view photo files and play audio files.

Supported modes for HDMI/DVI and Component

	480i	480p	576i	576p	720p	1080i	1080p
HDMI/DVI 50Hz	X	X	X	O	O	O	O
HDMI/DVI 60Hz	X	O	X	X	O	O	O
Component	O	O	O	O	O	O	O

Remote Control

You can use the remote control up to a distance of about 23 feet from the TV.

The performance of the remote control may be affected by bright light.

1. POWER button (turns the TV on and off)
2. Selects the TV mode directly.
3. Number buttons for direct channel access
4. Use to Select on-screen menu items
5. Temporary sound switch-off
6. [+] Volume increase
   [−] Volume decrease
7. Available source selection
8. Channel control button
9. Use to quickly select frequently used functions.
10. Control the cursor in the menu
11. Use to see information on the current broadcast
12. Use these buttons in the Channel list, etc.
13. Sound mode selection
14. Use these buttons in the Channel list, and Anynet+.
15. Previous channel
16. [^] Next channel
    [v] Previous channel
17. Displays the main on-screen menu
18. Press to switch to your Favourite channels.
19. Returns to the previous menu
20. Exit the on-screen menu
21. This function enables you to view and play photo, music and movie files from an external device. (Refer to pages 29 (Photo), 31 (Music))
22. Picture size selection
23. Digital subtitle display
24. Electronic Program Guide (EPG) display

Teletext Functions

2. Exit from the teletext display (depending on the model)
7. Teletext mode selection (LIST/FLOF)
8. Teletext store
9. Teletext size
11. Teletext reveal
12. Fastext topic selection
13. Teletext display/mix both teletext information and the normal broadcast
16. Teletext sub page
17. P [^] :Teletext next page
    P [v] :Teletext previous page
18. Teletext index
20. Teletext hold
21. Teletext cancel

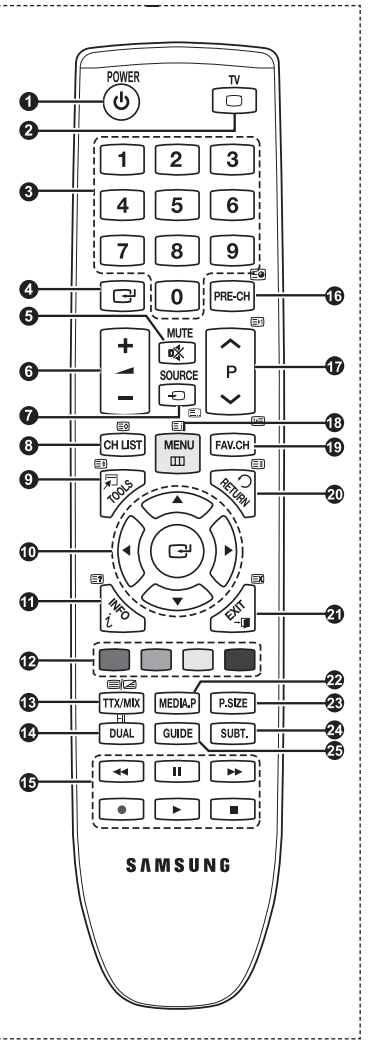

Installing Batteries in the Remote Control

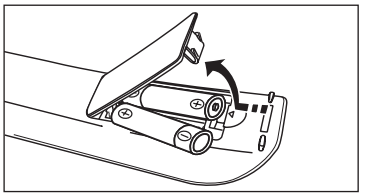

1. Lift the cover at the back of the remote control upward as shown in the figure.
2. Install two AAA size batteries.
   - Make sure to match the '+' and '–' ends of the batteries with the diagram inside the compartment.
3. Close the cover.
   - Remove the batteries and store them in a cool, dry place if you won't be using the remote control for a long time.

- If the remote control doesn't work, check the following
  1. Is the TV power on?
  2. Are the plus and minus ends of the batteries reversed?
  3. Are the batteries drained?
  4. Is there a power outage or is the power cord unplugged?
  5. Is there a special fluorescent light or neon sign nearby?

Switching On and Off

The mains lead is attached to the rear of your set.

1. Plug the mains lead into an appropriate socket.
   - The standby indicator lights up on your set.
2. Press the **POWER** ⏻ button on your set.
   - You also can press the **POWER** ⏻ button or the **TV** button on the remote control to turn the TV on. The programme that you were watching last is reselected automatically.
3. Press the numeric button (0~9) or channel up / down (∧ / ∨) button on the remote control or ∧ **CH** ∨ button on your set.
   - When you switch the set on for the very first time, you will be asked to choose language in which the menus are to be displayed.
4. To switch your set off, press the **POWER** ⏻ button again.

Placing Your Television in Standby Mode

Your set can be placed in standby mode in order to reduce the power consumption. The standby mode can be useful when you wish to interrupt viewing temporarily (during a meal, for example).

1. Press the **POWER** ⏻ button on the remote control.
   - The screen is turned off and a red standby indicator appears on your set.
2. To switch your set back on, simply press the **POWER** ⏻, numeric buttons (0~9), **TV** button or channel up / down (∧ / ∨) button again.
   - Do not leave your set in standby mode for long periods of time (when you are away on holiday, for example). It is best to unplug the set from the mains and aerial.

Viewing the Menus

1. With the power on, press the **MENU** button. The main menu appears on the screen. The menu's left side has icons: **Picture, Sound, Channel, Setup, Input, Application, Support**.
2. Press the ▲ or ▼ button to select one of the icons. Then press the **ENTER** button to access the icon's sub-menu.
3. Press the **EXIT** button to exit.

   The on-screen menus disappear from the screen after about one minute.



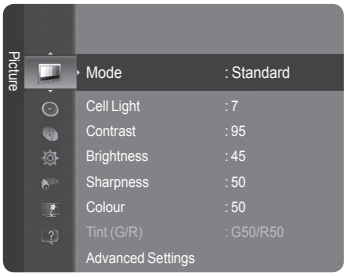

Using the TOOLS Button

You can use the **TOOLS** button to select your frequently used functions quickly and easily. The **Tools** menu changes depending on which external input mode you are viewing.

1. Press the **TOOLS** button. The **Tools** menu will appear.
2. Press the ▲ or ▼ button to select a menu, then press the **ENTER** button.
3. Press the ▲ / ▼ / ◄ / ► / **ENTER** buttons to display, change, or use the selected items. For a more detailed description of each function, refer to the corresponding page.

Anynet+ (HDMI-CEC), see page 35
- Picture Mode, see page 15
- Sound Mode, see page 20
- Sleep Timer, see page 24
- SRS TS HD, see page 20
- Energy Saving, see page 23
- Add to Favourite (or Delete from Favourite), see page 13
- Auto Adjustment, see page 18

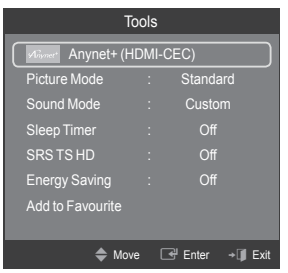

Plug & Play Feature

When the TV is initially powered on, basic settings proceed automatically and subsequently.

- The Screen Saver is activated if there is no remote control key input for longer than 1 minute while Plug & Play is running.
- The Screen Saver is activated if there is no operating signal for longer than 15 minutes.

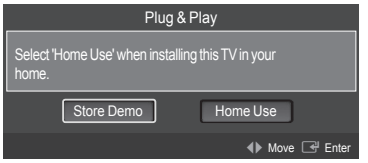

1. Press the **POWER** button on the remote control. The message **Select 'Home Use' when installing this TV in your home.** is displayed.
2. Then press the ◄ or ► button to select **Store Demo** or **Home Use**, then the **ENTER** button.
   - We recommend setting the TV to **Home Use** mode for the best picture in your home environment.
   - **Store Demo** mode is only intended for use in retail environments.
   - If the unit is accidentally set to **Store Demo** mode and you want to return to **Home Use** (Standard): Press the Volume button on the TV. When the volume OSD is displayed, press and hold the **MENU** button on the TV for 5 seconds.
   - The factory default setting for the picture will be **Standard**. **Standard** mode is the recommended home viewing picture mode.
3. Press the **ENTER** button. Select the appropriate country by pressing the ▲ or ▼ button. Press the **ENTER** button to confirm your choice.
4. Press the ▲ or ▼ button to select the Antenna source to memorize. Press the **ENTER** button to select **Start**.
   - **Digital & Analogue**: Digital and Analogue channels.
   - **Digital**: Digital channels.
   - **Analogue**: Analogue channels.
   - The channel search will start and end automatically.
   - Press the **ENTER** button at any time to interrupt the memorization process.
   - After all the available channels are stored, the message **Set the Clock Mode.** is displayed.
5. Press the **ENTER** button. Press the ▲ or ▼ button to select **Auto**, then Press the **ENTER** button.
   - If you select **Manual**, **Set current date and time** is displayed. (refer to page 24)
   - If you have received a digital signal, the time will be set automatically. If not, see page 24 to set the clock.
6. Press the ▲ or ▼ button to highlight the time zone for your local area (and to move the highlight to the appropriate time zone on the map of the Australia). Press the **ENTER** button.
7. The brief instruction on **How to get the best performance from your new HDTV** is displayed. Press the **ENTER** button.
   - You can change previous or next page by pressing the ◄ or ► button.
   - This menu is available **HD Connection Guide** in the **Support** menu.
8. The message **Enjoy your TV.** is displayed. When you have finished, press the **ENTER** button.

If you want to return to this feature...

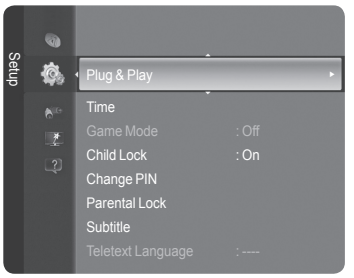

1. Press the **MENU** button to display the menu. Press the ▲ or ▼ button to select **Setup**, then press the **ENTER** button.
2. Press the **ENTER** button again to select **Plug & Play**.
3. Enter your 4 digit PIN number. The default PIN number of a new TV set is '0-0-0-0'.
   - If you want to change PIN number, refer to 22 page.
   - The **Plug & Play** feature is only available in the **TV** mode.
   - Any previous settings and adjustments will remain including the picture mode. All **Channel** settings will be lost. For home viewing, ensure the picture mode is set to **Standard**.

Channel Control

Storing Channels

❑ Country

You can change the desired country.

- The PIN number input screen appears. Enter your 4 digit PIN number.
- The default PIN number of a new TV set is '0-0-0-0'.

❑ Auto Store

Scans for all channels with active broadcast stations (and availability depends on your country) and stores them in the TV's memory.
You can memorize the Antenna source.

- **Digital & Analogue**: Digital and Analogue channels.
- **Digital**: Digital channels.
- **Analogue**: Analogue channels.

- If you want to stop **Auto Store**, press the **ENTER** button.
- The **Stop Auto Store?** message will be displayed.
- Select **Yes** by pressing the ◄ or ► button, then press the **ENTER** button.
- If a channel is locked using the **Child Lock** function, the PIN input window appears.

❑ Manual Store

Scans for a channel manually and stores it in the TV's memory.

Digital Channel (DTV)

Manual store for digital channels.

- **Channel**: Set the Channel number using the ▲, ▼ or number (**0~9**) buttons.
- **Frequency**: Set the frequency using the number buttons.
- **Bandwidth**: Set the bandwidth using the ▲, ▼ or number (**0~9**) buttons.

- When it has finished, channels are updated in the channel list.

Analogue Channel

Manual store for analogue channel.

- **Programme** (Programme number to be assigned to a channel): Sets the programme number using the ▲, ▼ or number (0~9) buttons.
- **Colour System** → **Auto / PAL / SECAM / NTSC4.43**: Sets the colour system value using the ▲ or ▼ button.
- **Sound System** → **BG / DK / I / L** : Sets the sound system value using the ▲ or ▼ button.
- **Channel** (When you know the number of the channel to be stored): Press the ▲ or ▼ button to select **C** (Air channel) or **S** (Cable channel). Press the ► button, then press the ▲, ▼ or number (**0~9**) buttons to select the required number.
  - You can also select the channel number directly by pressing the number (**0~9**) buttons.
  - If there is abnormal sound or no sound, reselect the sound standard required.
- **Search** (When you do not know the channel numbers): Press the ▲ or ▼ button to start the search. The tuner scans the frequency range until the first channel or the channel that you selected is received on the screen.
- **Store** (When you store the channel and associated programme number): Set to **OK** by pressing the **ENTER** button.

- Channel mode
  - **C** (Air channel mode): You can select a channel by entering the assigned number to each air broadcasting station in this mode.
  - **S** (Cable channel mode): You can select a channel by entering the assigned number for each cable channel in this mode.

Continued...

❑ Full Guide / Mini Guide

The EPG (Electronic Programme Guide) information is provided by the broadcasters. Programme entries may appear blank or out of date as a result of the information broadcast on a given channel. The display will dynamically update as soon as new information becomes available.

- **Full Guide**: Displays the programme information as time ordered One hour segments. One hours of programme information is displayed which may be scrolled forwards or backwards in time.
- **Mini Guide**: The information of each programme is displayed by each line on the current channel Mini Guide screen from the current programme onwards according to the programme starting time order.

❑ Default Guide

- **Mini Guide / Full Guide**: You can decide whether to display either the **Mini Guide** or the **Full Guide** when the **GUIDE** button on the remote control is pressed.

  You can also display the guide menu simply by pressing the **GUIDE** button.



Using the Full / Mini Guide

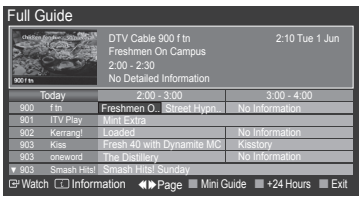



▲ / ▼ / ◄ / ►, (**ENTER**)	Select a programme by pressing the ▲/▼/◄/► button. If the next progrmme is selected, it is scheduled with the clock icon displayed. If the **ENTER** button is pressed again, press the ▲/▼/◄/► button to select **Cancel Schedules**, the scheduling is canceled with the clock icon gone. For details about scheduling programmes, refer to the section.
RED	Toggle between the **Mini Guide** or **Full Guide**.
GREEN	**Full Guide**: Scroll backwards quickly (-24 hours). **Mini Guide**: Display previous page quickly.
YELLOW	**Full Guide**: Scroll forwards quickly (+24 hours). **Mini Guide**: Display next page quickly.
BLUE	Exit the guide.
INFO	**INFO** button for the detailed information. Channel Number, Running Time, Status Bar, Parental Level, Video Quality Information (HD/SD), Sound Modes, Subtitle or Teletext, languages of Subtitle or Teletext and brief summary of the highlighted programme are included on the detailed information. "…" will be appeared if the summary is long.

❑ Channel List

For the detailed procedures on using the **Channel List**, refer to the descriptions on pages 13~14.

❑ Channel Mode

When the P (∧ / ∨) button is pressed, Channels will be switched within the selected channel list.

- **Added Ch.**: Channels will be switched within the memorized channel list.
- **Favourite Ch.**: Channels will be switched within the favourite channel list.

❑ Fine Tune (only analogue channels)

If the reception is clear, you do not have to fine tune the channel, as this is done automatically during the search and store operation. If the signal is weak or distorted, you may have to fine tune the channel manually.

- Fine tuned channels that have been saved are marked with an asterisk * on the right-hand side of the channel number in the channel banner.
- If you do not store the fine-tuned channel in memory, adjustments are not saved.
- To reset the fine-tuning, select **Reset** by pressing the ▼ button and then press the **ENTER** button.

Managing Channels

Using this menu, you can Add / Delete or set Favourite channels and use the programme guide for digital broadcasts.

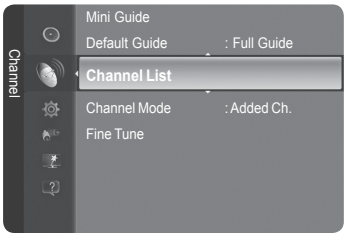

Select a channel in the **All Channels**, **Added Channels**, **Favourites,** or **Programmed** screen by pressing the ▲ or ▼ buttons, and pressing the **ENTER** button. Then you can watch the selected channel.

- **All Channels**: Shows all currently available channels.
- **Added Channels**: Shows all added channels.
- **Favourites**: Shows all favourite channels.
- **Programmed**: Shows all current reserved programmes.

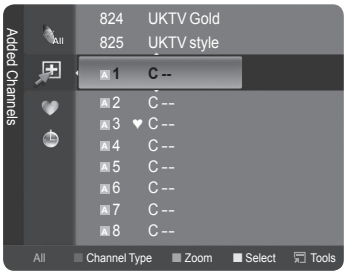

Using the Colour buttons with the Channel List

- **Red (**Channel Type**):** Toggle between your **TV**, **Radio**, **Data / Other** and **All**.
- **Green (**Zoom**)**: Enlarges or shrinks a channel number.
- **Yellow (**Select**)**: Selects multiple channel lists.
- **TOOLS (**Tools**)**: Displays the **Delete** (or **Add**), **Add to Favourite** (or **Delete from Favourite**), **Lock** (or **Unlock**), **Timer Viewing**, **Edit Channel Name**, **Edit Channel Number**, **Sort**, **Select All**, (or **Deselect All**)**,** or **Auto Store** menu.
  (The Options menus may differ depending on the situation.)

Channel Status Display Icons

A	An Analogue channel.	✓	A channel selected by pressing the yellow button.
♥	A channel set as a Favourite.		A programme currently being broadcast.
	A locked channel.		A reserved programme

❑ Channel List Tools Menu (in All Channels / Added Channels / Favourites)

Press the **TOOLS** button to use the tools menu.

Option menu items may differ depending on the channel status.

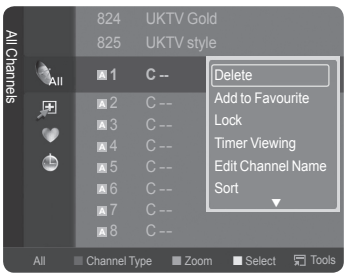

Add / Delete

You can delete or add a channel to display the channels you want.

All deleted channels will be shown on **All Channels** menu.

A gray-coloured channel indicates the channel has been deleted.

The **Add** menu only appears for deleted channels.

You can also delete a channel to the **Added Channels** or **Favourite** menu in the same manner.

Add to Favourite / Delete from Favourite

You can set channels you watch frequently as favourites.

Press the **TOOLS** button to display **Tools** menu.
You can also add the favourite channel by selecting **Tools** → **Add to Favourite** (or **Delete from Favourite**).

The "♥" symbol will be displayed and the channel will be set as a favourite.

All favourite channels will be shown on **Favourite** menu.

To select the Favourite channels you have set up, press the **FAV.CH** button on the remote control.



Lock / Unlock

You can lock a channel so that the channel cannot be selected and viewed. This function is available only when the **Child Lock** is set to **On**. (see page 22)

The PIN number input screen appears. Enter your 4 digit PIN number.

The default PIN number of a new TV set is '0-0-0-0'. You can change the PIN, by selecting **Change PIN** from the menu.

The "🔒" symbol will be displayed and the channel will be locked.

Edit Channel Name (only analogue channel)

Channels can labeled so that their call letters appear whenever the channel is selected.

The names of digital broadcasting channels are automatically assigned and cannot be labeled.

Continued...

- **Edit Channel Number** (only digital channel)
  You can also edit the channel number by pressing the number buttons on the remote control.

- **Sort** (only analogue channel)
  This operation allows you to change the programme numbers of the stored channels. This operation may be necessary after using the auto store.

- **Timer Viewing**

  If you reserve a programme you want to watch, the channel is automatically switched to the reserved channel in the Channel List; even when you are watching another channel. To reserve a programme set the current time first. (See page 24)
  - Only memorized channels can be reserved.
  - You can set the channel, month, day, year, hour and minute directly by pressing the number buttons on the remote control.
  - Reserving a programme will be shown on **Programmed** menu.
  - **Digital Programme Guide and Viewing Reservation**
    When a digital channel is selected, and you press the ► button, the Programme Guide for the channel appears.
    You can reserve a programme according to the procedures described above.

- **Select All / Deselect All**
  - **Select All**: You can select all the channels in the channel list.
  - **Deselect All**: You can deselect all the selected channels in the channel list.
  - You can perform the add / delete, add to Favourites / delete from Favourites, or lock / unlock function for multiple channels at the same time. Select the required channels and press the yellow button to set all the selected channels at the same time.
  - The ✓ mark appears to the left of the selected channels.
  - You can only select **Deselect All** when there is a selected channel.

- **Auto Store**
  - For further details on setting up options, refer to page 11.
  - If a channel is locked using the **Child Lock** function, the PIN input window appears.

❑ Channel List Tools Menu (in **Programmed**)

You can view, modify or delete a reservation.

- Press the **TOOLS** button to use the tools menu.

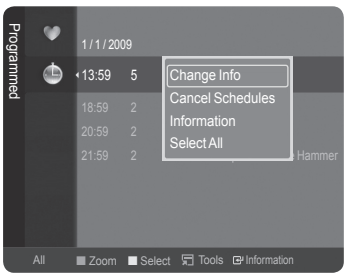

- **Change Info**
  Select to change a viewing reservation.

- **Cancel Schedules**
  Select to cancel a viewing reservation.

- **Information**
  Select to view a viewing reservation. (You can also change the reservation information.)

- **Select All / Deselect All**
  You can select (or deselect) all channels in the channel list.

Picture Control

Changing the Picture Settings

❑ Mode

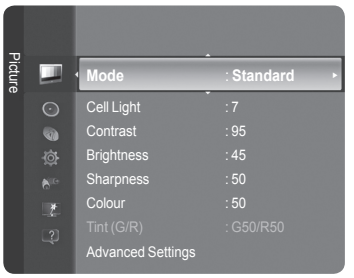

You can select the type of picture which best corresponds to your viewing requirements.

- **Dynamic**: Selects the picture for high-definition in a bright room.
- **Standard**: Selects the picture for the optimum display in a normal environment.
- **Eco**: Selects the picture for optimum and eye-comfortable display.
- **Movie**: Selects the picture for viewing movies in a dark room.

Press the **TOOLS** button to display **Tools** menu.
You can also set the picture mode by selecting **Tools** → **Picture Mode**.

❑ Cell Light / Contrast / Brightness / Sharpness / Colour / Tint (G/R)

Your television has several setting options that allow you to control the picture quality.

- **Cell Light**: Adjusts the pixel brightness.
- **Contrast**: Adjusts the contrast level of the picture.
- **Brightness**: Adjusts the brightness level of the picture.
- **Sharpness**: Adjusts the edge definition of the picture.
- **Colour**: Adjusts Colour saturation of the picture.
- **Tint (G/R)**: Adjusts the Colour tint of the picture.

Select a picture mode to be adjusted first. The adjusted values are saved for each picture mode.
When you make changes to **Cell Light**, **Contrast**, **Brightness**, **Sharpness**, **Colour,** or **Tint (G/R)**, the OSD will be adjusted accordingly.
In Analogue TV, Ext., AV modes of the PAL system, you cannot use the Tint Function.
In **PC** mode, you can only make changes to **Cell Light**, **Contrast** and **Brightness**.
Settings can be adjusted and stored for each external device you have connected to an input of the TV.
The energy consumed during use can be significantly reduced if the level of brightness of the picture is reduced, and then this will reduce the overall running cost.

❑ Advanced Setting

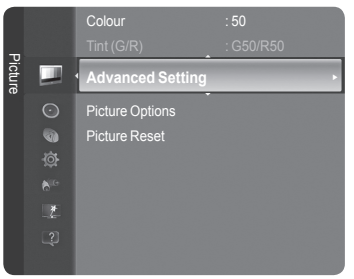

You can adjust the detailed settings for your screen including the color and contrast.

Advanced Setting is available in **Standard** or **Movie** mode.
In **PC** mode, you can only make changes to **Dynamic Contrast**, **Gamma** and **White Balance** from among the **Advanced Setting** items.

Black Tone → Off / Dark / Darker / Darkest
You can select the black level on the screen to adjust the screen depth.

Dynamic Contrast → Off / Low / Medium / High
You can adjust the screen contrast so that the optimal contrast is provided.

Gamma
You can adjust the primary colour Intensity.

Colour Space
Colour Space is a colour matrix composed of red, green and blue colours. Select your favourite colour space to experience the most natural colour.

- **Auto**: Automatically sets the color range depending on the input video source.
- **Native**: Sets the color range wider than the that of the input video source.
- **Custom**: Adjusts the color range to suit your preference.

Customizing the Colour Space
- **Colour → Red / Green / Blue / Yellow / Cyan / Magenta**
- Adjusts the Colour range to suit your preference. **Colour** is available when **Colour Space** is set to **Custom**.
- **Red / Green / Blue**: In **Colour**, you can adjust the RGB values for the selected colour.
- **Reset**: Resets the colour space to the default values.

Continued...

■ **White Balance**

You can adjust the colour temperature for more natural picture colours.

- **R-Offset / G-Offset / B-Offset / R-Gain / G-Gain / B-Gain**: Changing the adjustment value will refresh the adjusted screen.
- **Reset**: The previously adjusted white balance will be reset to the factory defaults.

■ **Flesh Tone**

You can adjust the flesh tone to be more or less red.

✎ Changing the adjustment value will refresh the adjusted screen.

■ **Edge Enhancement → Off / On**

You can emphasize object boundaries in the picture.

■ **xvYCC → Off / On**

Setting the xvYCC mode to on increases detail and colour space when watching movies from an external device (i.e. DVD player).

✎ **xvYCC** is available when the picture mode is set to **Movie**, and the external input is set to **HDMI** or **Component** mode.

✎ This function may not be supported depending on your external device.

❑ Picture Options

You can customize the additional picture settings to suit your preference.

✎ In **PC** mode, you can only make changes to the **Colour Tone, Size** and **Screen Burn Protection** from among the items in **Picture Options**.

■ **Colour Tone → Cool / Normal / Warm1 / Warm2 / Warm3**

You can select the most comfortable colour tone to your eyes.

✎ The adjusted values are stored according to the selected Picture mode.

✎ **Warm1**, **Warm2**, or **Warm3** is only activated when the picture mode is **Movie**.

■ **Size**

You can select the picture size which best corresponds to your viewing requirements.

- **16:9**: Sets the picture to the 16:9 aspect ratio.
- **Wide Zoom**: Magnify the size of the picture more than 4:3.
- **Zoom**: Magnifies the 16:9 wide picture (in the vertical direction) to fit the screen size.
- **4:3**: Sets the picture to the 4:3 aspect ration.
- **Screen Fit:** Use the function to see the full image without any cutoff when HDMI (720p/1080i/1080p) or Component (1080i/1080p) signals are input.

✎ The picture size options may vary depending on the input source.

✎ The items available may differ depending on the selected mode.

✎ In **PC** Mode, only **16:9** and **4:3** mode can be adjusted.

✎ Settings can be adjusted and stored for each external device you have connected to an input of the TV.

✎ Temporary image retention may occur when viewing a static image on the set for more than two hours.

✎ After selecting **Wide Zoom** mode: Press the ► button to select **Position**, then press the **ENTER** button. Press the ▲ or ▼ button to move the screen up / down. Then press the **ENTER** button.

✎ After selecting **Zoom** mode: Press the ► button to select **Position**, then press the **ENTER** button. Press the ▲ or ▼ button to move the picture up and down. Then press the **ENTER** button. Press the ► button to select **Size**, then press the **ENTER** button. Press the ▲ or ▼ button to magnify or reduce the picture size in the vertical direction. Then press the **ENTER** button.

✎ After selecting **Screen Fit** in **HDMI** (1080i / 1080p) or **Component** (1080i / 1080p) mode: Select **Position** by pressing the ◄ or ►button. Use the ▲, ▼, ◄ or ► button to move the picture.

✎ **Reset**: Press the ◄ or ► button to select **Reset**, then press the **ENTER** button. You can initialize the setting.

✎ If you use the **Screen Fit** function with HDMI 720p input, 1 line will be cut at the top, bottom, left and right as in the overscan function.



✎ You can select these options simply by pressing the **P.SIZE** button on the remote control.

■ **Digital NR → Off / Low / Medium / High / Auto**

If the broadcast signal received by your TV is weak, you can activate the Digital Noise Reduction feature to help reduce any static and ghosting that may appear on the screen.

✎ When the signal is weak, select one of the other options until the best picture is displayed.

Continued...

■ **HDMI Black Level → Normal / Low**

You can directly select the black level on the screen to adjust the screen depth.

✎ This function is active only when the external input connects to HDMI (RGB signals).

■ **1080 Full HD Motion Demo → Off / On**

Samsung' new generation PDP panels deliver stunning Full HD motion clarity when viewing fast action sports, movies, and games.

✎ This function is not available in **PC**, **Game**, or **Media Play** mode.

■ **Film Mode**

You can optimize the picture mode for watching movies.

- **Off** : Turn the film mode function off.
- **Auto1 :** Automatically adjusts the picture for the best quality when watching a film.
- **Auto2 :** Automatically optimizes the video text when watching a film.

✎ **Film Mode** is supported in TV, AV, COMPONENT(480i/1080i) and HDMI(480i/1080i).

✎ **Film Mode** is not supported in DTV channel with resolution 576p/720p.

■ **Blue Only Mode → Off / On**

This function is for AV device measurement experts. This function displays the blue signal only by removing the red and green signals from the video signal so as to provide a Blue Filter effect that is used to adjust the Color and Tint of video equipment such as DVD players, Home Theaters, etc.

✎ **Blue Only Mode** is available when the picture mode is set to **Movie** or **Standard**.

■ **Screen Burn Protection**

Configures the Screen Burn Protection Options to prevent and reduce pixel burn.

When an image remains in one position too long, it may cause a permanent burn on the screen.

- **Pixel Shift**: To reduce the possibility of screen burn, this unit is equipped with screen burn prevention technology. This technology enables you to set picture movement up/down (Vertical) and side to side (Horizontal). The Time setting allows you to program the time between movement of the picture in minutes.

  ✎ Set **Pixel Shift** to On by pressing the ▲ or ▼ button, then press the **ENTER** button.

  ✎ Select the required option by pressing the ▲ or ▼ button, then press the **ENTER** button.

  ✎ Available options: **Horizontal, Vertical, Time**.

  ✎ Optimum condition for pixel shift

	Item	TV/Ext/AV/Component/HDMI/PC
Horizontal	0~4	2
Vertical	0~4	4
Time (minute)	1~4 min	2 min

  ✎ The Pixel Shift value may differ depending on the monitor size (inches) and mode.

  ✎ This function is not available in the **Screen Fit** mode.

- **Scrolling**: This function helps remove after images on the screen by moving all the pixels on the PDP according to a pattern Use this function when there are remaining after images or symbols on the screen especially when you displayed a still image on the screen for a long time.
- **Side Grey**: When you watch TV with the screen ratio of 4:3, the screen is prevented from any damage by adjusting the white balance on both extreme left and right sides.
  - **Light**: When you set the screen ratio to 4:3, it brightens the left and right sides.
  - **Dark**: When you set the screen ratio to 4:3, it darkens the left and right sides.

❑ Picture Reset → Reset Picture Mode / Cancel

Resets all picture settings to the default values.

✎ Select a picture mode to be reset. The reset is performed for each picture mode.

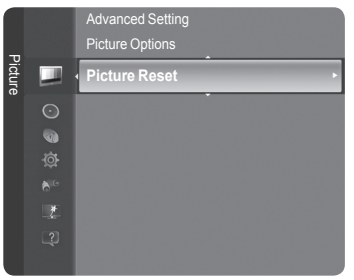

Setting up the TV with your PC

Preset: Press the **SOURCE** button to select **PC** mode.

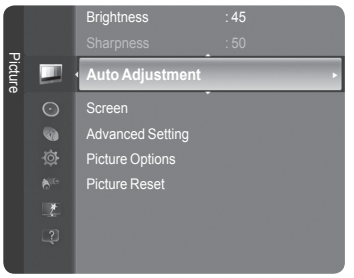

❑ Auto Adjustment

Auto Adjustment allows the PC screen of set to self-adjust to the incoming PC video signal. The values of fine, coarse and position are adjusted automatically.

This function does not work in DVI-HDMI mode.

Press the **TOOLS** button to display **Tools** menu.
You can also set the adjustment by selecting **Tools** → **Auto Adjustment**.

❑ Screen

- **Coarse**
  Adjusts the frequency when vertical noise appears on the screen.
- **Fine**
  Adjusts the screen to be clearer.
- **PC Position**
  Adjust the PC's screen positioning if it does not fit the TV screen. Press the ▲ or ▼ button to adjusting the Vertical-Position. Press the ◄ or ► button to adjust the Horizontal-Position.
- **Image Reset**
  You can replace all image settings with the factory default values.

PC Display

❑ Setting Up Your PC Software (Based on Windows XP)

The Windows display-settings for a typical computer are shown below. The actual screens on your PC will probably be different, depending upon your particular version of Windows and your particular video card. However, even if your actual screens look different, the same basic set-up information will apply in almost all cases. (If not, contact your computer manufacturer or Samsung Dealer.)

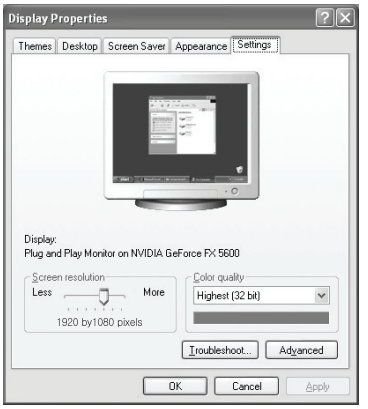

1. First, click on 'Control Panel' on the Windows start menu.
2. When the control panel window appears, click on 'Appearance and Themes' and a display dialog-box will appear.
3. When the control panel window appears, click on 'Display' and a display dialog-box will appear.
4. Navigate to the 'Settings' tab on the display dialog-box.

   The correct size setting (resolution)

   Optimum: 1920 X 1080 pixels

   If a vertical-frequency option exists on your display settings dialog box, the correct value is '60' or '60 Hz'. Otherwise, just click 'OK' and exit the dialog box.

❑ Display Modes

Both screen position and size will vary depending on the type of PC monitor and its resolution. The resolutions in the table are recommended.

D-Sub and HDMI/DVI Input

Mode	Resolution	Horizontal Frequency (kHz)	Vertical Frequency (Hz)	Pixel Clock Frequency (MHz)	Sync Polarity (H/V)
IBM	640 x 350	31.469	70.086	25.175	+ / -
	720 x 400	31.469	70.087	28.322	- / +
MAC	640 x 480	35.000	66.667	30.240	- / -
	832 x 624	49.726	74.551	57.284	- / -
	1152 x 870	68.681	75.062	100.000	- / +
VESA CVT	720 x 576	35.910	59.950	32.750	- / +
	1152 x 864	53.783	59.959	81.750	- / +
	1280 x 720	44.772	59.855	74.500	- / +
	1280 x 720	56.456	74.777	95.750	- / +
	1280 x 960	75.231	74.857	130.000	- / +
VESA DMT	640 x 480	31.469	59.940	25.175	- / -
	640 x 480	37.861	72.809	31.500	- / -
	640 x 480	37.500	75.000	31.500	- / -
	800 x 600	37.879	60.317	40.000	+ / +
	800 x 600	48.077	72.188	50.000	+ / +
	800 x 600	46.875	75.000	49.500	+ / +
	1024 x 768	48.363	60.004	65.000	- / -
	1024 x 768	56.476	70.069	75.000	- / -
	1024 x 768	60.023	75.029	78.750	+ / +
	1152 x 864	67.500	75.000	108.000	+ / +
	1280 x 800	49.702	59.810	83.500	- / +
	1280 x 800	62.795	74.934	106.500	- / +
	1280 x 960	60.000	60.000	108.000	+ / +
	1280 x 1024	63.981	60.020	108.000	+ / +
	1280 x 1024	79.976	75.025	135.000	+ / +
	1360 x 768	47.712	60.015	85.500	+ / +
	1440 x 900	55.935	59.887	106.500	- / +
	1440 x 900	70.635	74.984	136.750	- / +
	1680 x 1050	65.290	59.954	146.250	- / +
VESA GTF	1280 x 720	52.500	70.000	89.040	- / +
	1280 x 1024	74.620	70.000	128.943	- / -
VESA DMT / DTV CEA	1920 x 1080p	67.500	60.000	148.500	+ / +

- When using an HDMI / DVI cable connection, you must use the **HDMI IN 2 (DVI)** jack.
- The interlace mode is not supported.
- The set might operate abnormally if a non-standard video format is selected.

Sound Control

Changing the Sound Setting

❑ Mode → Standard / Music / Movie / Clear Voice / Custom

You can select the type of special sound effect to be used when watching a given broadcast.

Press the **TOOLS** button to display **Tools** menu.
You can also configure the sound mode by selecting **Tools** → **Sound Mode**.

❑ Equalizer

The sound settings can be adjusted to suit your personal preferences.

- **Mode**: You can select a sound mode to suit your personal preferences.
- **Balance**: Controls the balance between the right and left speakers.
- **100Hz / 300Hz / 1KHz / 3KHz / 10KHz** (Bandwidth Adjustment): To adjust the level of different bandwidth frequencies.
- **Reset**: Resets the equalizer settings to the default values.

❑ SRS TruSurround HD → Off / On

SRS TruSurround HD is the combined technology of TruSurround and FOCUS, TruBass.
SRS TruSurround HD is down mixing technology that makes the Surround Sound effect of virtual 5.1 channel via two speakers. This function provide not only rich deep bass at a low-pitched sound but also improve the resolution at a high-pitched sound.

Press the **TOOLS** button to display **Tools** menu.
You can also set the SRS TruSurround HD by selecting **Tools** → **SRS TS HD**.

TruSurround HD, SRS and the (●) symbol are trademarks of SRS Labs, Inc.
TruSurround HD technology is incorporated under license from SRS Labs, Inc.

❑ Audio Language (only digital channel)

You can change the default value for audio languages. Displays the language information for the incoming stream.

You can only select the language among the actual languages being broadcast.

❑ Audio Format → MPEG / Dolby Digital (only digital channel)

When sound is emitted from both the main speaker and the audio receiver, a sound echo may occur due to the decoding speed difference between the main speaker and the audio receiver. In this case, use the TV Speaker function.

You can only select the language among the actual languages being broadcast.

Manufactured under license from Dolby Laboratories.
Dolby and the double-D symbol are trademarks of Dolby Laboratories.

❑ Audio Description (only digital channel)

This is an auxiliary audio function that provides an additional audio track for visually challenged persons. This function handles the Audio Stream for the AD (Audio Description), when it is sent along with the Main audio from the broadcaster. Users can turn the Audio Description On or Off and control the volume.

- **Audio Description → Off / On**
  Turn the audio description function on or off.

- **Volume**
  You can adjust the audio description volume.
  Volume is active when **Audio Description** is set to **On**.

Continued...

❑ Auto Volume → Off / On

Each broadcasting station has its own signal conditions, and so it is not easy to adjust the volume every time the channel is changed. This feature lets you automatically adjust the volume of the desired channel by lowering the sound output when the modulation signal is high or by raising the sound output when the modulation signal is low.

❑ Speaker Select → External Speaker / TV Speaker

If you want to hear the sound through separate speakers, cancel the internal amplifier.

- The **–** **+**, **MUTE** buttons do not operate when the **Speaker Select** is set to **External Speaker**.
- If you select **External Speaker** in the **Speaker Select** menu, the sound settings will be limited.

	TV's Internal Speakers	Audio Out (Optical, L / R Out) to Sound System
	TV / AV / Component / PC / HDMI	TV / AV / Component / PC / HDMI
TV Speaker	Speaker Output	Sound Output
External Speaker	Mute	Sound Output
Video No Signal	Mute	Mute

❑ Sound Reset → Reset All / Reset Sound Mode / Cancel

You can restore the Sound settings to the factory defaults.

Selecting the Sound Mode

When you set to **Dual I II**, the current sound mode is displayed on the screen.

	Type of broadcast	On-screen indication
NICAM Stereo	Regular broadcast (Standard audio)	**Mono** (Normal use)
	Regular + NICAM Mono	**NICAM** ⟷ **Mono** (Normal)
	NICAM-Stereo	**NICAM Stereo** ⟷ **Mono** (Normal)
	NICAM Dual-I/II	**NICAM Dual-1** → **NICAM Dual-2** → **Mono** (Normal)
A2 Stereo	Regular broadcast (Standard audio)	**Mono** (Normal use)
	Bilingual or DUAL-I/II	**Dual I** ⟷ **Dual II**
	Stereo	**Stereo** ⟷ **Mono** (Forced mono)

- If the stereo signal is weak and an automatic switching occurs, then switch to the mono.
- This function is only activated in stereo sound signal. It is deactivated in mono sound signal.
- This function is only available in **TV** mode.
- You can select these options simply by pressing the **DUAL** button on the remote control.



Function Description

Configuring the Setup Menu

❑ Game Mode

When connecting to a game console such as PlayStation™ or Xbox™, you can enjoy a more realistic gaming experience by selecting the game menu.

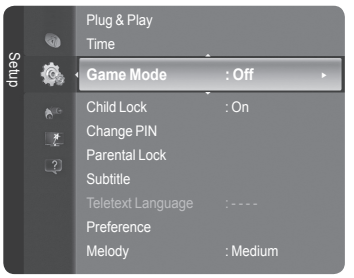

When the Game Mode is On

- **Picture Mode** is automatically changed to **Standard** and users cannot change the mode.
- **Sound Mode** is automatically changed to **Custom** and users cannot change the mode. Adjust the sound using the equalizer.
- The Reset in the Sound menu is activated. Reset function initializes the Equalizer settings to the factory default setting.

✎ **Game Mode** is not available in regular TV mode or **Game Mode** set to **Off**.
✎ If the picture is poor when external device is connected to TV, check if Game Mode is On.
✎ This function supports only game function.
✎ If you display the TV menu in Game mode, the screen shakes slightly.
✎ The mark (🎮) appears on the screen which means that Game Mode is on with the selected source.
✎ Game mode is not available in PC mode.

❑ Child Lock → Off / On

This feature allows you to prevent unauthorized users, such as children, from watching unsuitable programmes by muting out video and audio.

✎ Before the setup screen appears, the PIN number input screen appears. Enter your 4 digit PIN number.
✎ The default PIN number of a new TV set is '0-0-0-0'. You can change the PIN by selecting **Change PIN** from the menu.
✎ You can lock some channels in Channel List. (refer to page 13)
✎ **Child Lock** is available only in TV mode.

❑ Change PIN

You can change your personal ID number that is required to set up the TV.

✎ Before the setup screen appears, the PIN number input screen appears. Enter your 4 digit PIN number.
✎ The default PIN number of a new TV set is '0-0-0-0'.
✎ If you forget the PIN code, press the remote control buttons in the following sequence, which resets the PIN to '0-0-0-0': **POWER** (Off), **MUTE, 8, 2, 4, POWER** (On).

❑ Parental Lock

This feature allows you to prevent unauthorized users, such as children, from watching unsuitable programmes by a 4-digit PIN (Personal Identification Number) code that is defined by the user.

✎ Before the setup screen appears, the PIN number input screen appears. Enter your 4 digit PIN number.
✎ The default PIN number of a new TV set is '0-0-0-0'. You can change the PIN by selecting **Change PIN** from the menu.
✎ When the parental ratings are set, the "🔒" symbol is displayed.
✎ **Allow All**: Press to unlock all TV ratings.
Block All: Press to lock all TV ratings.

❑ Subtitle

You can activate and deactivate the subtitles. Use this menu to set the Subtitle Mode. **Normal** under the menu is the basic subtitle and **Hard of hearing** is the subtitle for a hearing-impaired person.

- **Subtitle → Off / On**: Switches subtitles off or on.
- **Mode → Normal / Hard of hearing**: Sets the subtitle mode.
- **Subtitle Language**: Set the subtitle language.

✎ If the programme you are watching does not support the **Hard of hearing** function, **Normal** automatically activates even though **Hard of hearing** mode is selected.
✎ English is the default in cases where the selected language is unavailable in the broadcast.
✎ You can select these options simply by pressing the **SUBT.** button on the remote control.

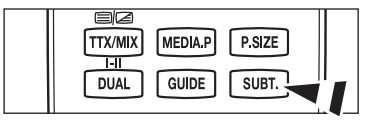

Continued...

❑ Teletext Language

You can set the Teletext language by selecting the language type.

✎ English is the default in cases where the selected language is unavailable in the broadcast.

❑ Preference

■ **Primary Audio Language / Secondary Audio Language / Primary Subtitle Language / Secondary Subtitle Language / Primary Teletext Language / Secondary Teletext Language**

Using this feature, users can select one of the languages. The language selected here is the default when the user selects a channel.

If you change the language setting, the Subtitle Language, Audio Language, and the Teletext Language of the Language menu are automatically changed to the selected language.

The Subtitle Language, Audio Language, and the Teletext Language of the Language menu show a list of languages supported by the current channel and the selection is highlighted. If you change this language setting, the new selection is only valid for the current channel. The changed setting does not change the setting of the Primary Subtitle Language, Primary Audio Language, or the Primary Teletext Language of the Preference menu.

❑ Digital Text → Disable / Enable (Not available in all locations)

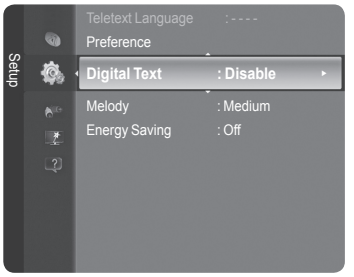

If the programme is broadcast with digital text, this feature is enabled.

✎ **MHEG** (**M**ultimedia and **H**ypermedia Information Coding **E**xperts **G**roup)
An International standard for data encoding systems used in multimedia and hypermedia. This is at a higher level than the MPEG system which includes data-linking hypermedia such as still images, character service, animation, graphic and video files as well as multimedia data. MHEG is user runtime interaction technology and is being applied to various fields including VOD (Video-On-Demand), ITV (Interactive TV), EC (Electronic Commerce), tele-education, tele-conferencing, digital libraries and network games.

❑ Melody → Off / Low / Medium / High

The TV power on / off melody sound can be adjusted.

✎ **The Melody does not play**
- When no sound is output from the TV because the **MUTE** button has been pressed.
- When no sound is output from the TV because the – (Volume) button has been pressed.
- When the TV is turned off by **Sleep Timer** function.

❑ Energy Saving

This feature adjusts the brightness of the TV in order to reduce power consumption. When watching TV at night, set the **Energy Saving** mode option to **High** to reduce eye fatigue as well as power consumption.

- **Off**: Turns off the energy saving function.
- **Low**: Sets the TV to low energy saving mode.
- **Medium**: Sets the TV to medium energy saving mode.
- **High**: Sets the TV to high energy saving mode.

Press the **TOOLS** button to display **Tools** menu.
You can also set the energy saving option by selecting **Tools** → **Energy Saving**.

Setting the Time

❑ Clock

Setting the clock is necessary in order to use the various timer features of the TV.

- The current time will appear every time you press the **INFO** button.
- If you disconnect the power cord, you have to set the clock again.

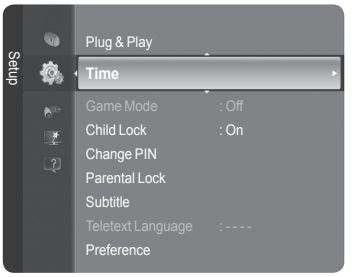

Clock Mode

You can set up the current time manually or automatically.

- **Auto**: Set the current time automatically using the time from the digital broadcast.
- **Manual**: Set the current time to a manually specified time.

Clock Set

You can set the current time manually.

- Set up this item when you have set **Clock Mode** to **Manual**.
- You can set the **Day**, **Month**, **Year**, **Hour**, **Minute** directly by pressing the number buttons on the remote control.

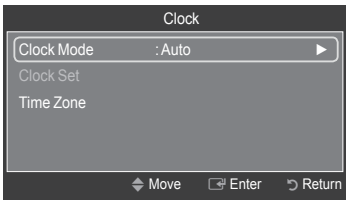

Time Zone

You can select your time zone.

- This function is only available when **Clock Mode** is set to **Auto**.
- Depending on the broadcast station and signal, the auto time may not be set correctly. If this occurs, set the time manually.
- The Antenna or cable must be connected in order to set the time automatically.

❑ Sleep Timer → Off / 30 min / 60 min / 90 min / 120 min / 150 min / 180 min

The sleep timer automatically shuts off the TV after a preset time.

- The TV automatically switches to standby mode when the timer reaches 0.
- To cancel the **Sleep Timer** function, select **Off**.

Press the **TOOLS** button to display **Tools** menu.
You can also set the sleep timer by selecting **Tools** → **Sleep Timer**.

❑ Timer 1 / Timer 2 / Timer 3

Three different on / off timer settings can be made.

- **On Time**: Set the hour, minute, and Activate / Inactivate.
  (To activate timer with the setting you've chosen, set to **Activate**.)
- **Off Time**: Set the hour, minute, and Activate / Inactivate.
  (To activate timer with the setting you've chosen, set to **Activate**.)
- **Volume**: Set the required volume level.
- **Source** : Selects TV or USB device.
  - When you select the **TV**, you can set the Antenna and Channel.
    - **Antenna**: Select ATV or DTV.
    - **Channel**: Select the desired channel.
  - When you select the **USB**, you can set the Contents.
    - **Contents**: Selects the desired contents on the **USB**.
- **Repeat**: Select **Once**, **Everyday**, **Mon~Fri**, **Mon~Sat**, **Sat~Sun**, or **Manual**.
  - When **Manual** is selected, press the ► button to select the desired day of the week. Press the **ENTER** button over the desired day and the ✓ mark will appear.
  - You must set the clock first.

- You can set the hour, minute by pressing the number buttons on the remote control.
- **Auto Power Off**
  When you set the timer On, the television will eventually turn off, if no controls are operated for 3 hours after the TV was turned on by the timer. This function is only available in timer On mode and prevents overheating, which may occur if a TV is on for too long time.

Source List / Edit Name

❑ Source List

Use to select TV or other external input sources such as DVD players or Cable Box / Satellite receivers (Set-Top Box) connected to the TV. Use to select the input source of your choice.

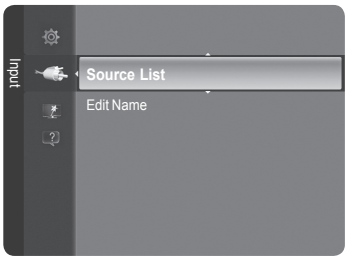

- **TV**, **AV1**, **AV2**, **Component1**, **Component2**, **PC**, **HDMI1**, **HDMI2/DVI**, **HDMI3, HDMI4**, **USB.**

  - You can choose only those external devices that are connected to the TV. In the **Source List**, connected inputs will be highlighted and sorted to the top. Inputs that are not connected will be sorted to the bottom.
  - **PC** always stays activated.
  - **Using the Colour buttons on the remote with the Source list**
    - **Red** (Refresh): Refreshes the connecting external devices.
    - **TOOLS** (Tools): Displays the **Edit Name** and **Information** menus.
  - Press the **SOURCE** button on the remote control to view an external signal source. TV mode can be selected by pressing the **TV** button, number buttons (**0~9**), and the **P** ∧ / ∨ button on the remote control.

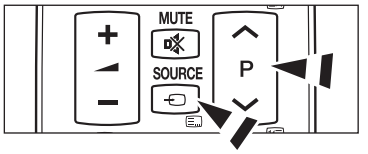

❑ Edit Name

- **VCR** / **DVD** / **Cable STB** / **Satellite STB** / **PVR STB** / **AV Receiver** / **Game** / **Camcorder** / **PC** / **DVI** / **DVI PC** / **TV** / **IPTV** / **Blu-ray** / **HD DVD** / **DMA**

  You can name the device connected to the input jacks to make your input source selection easier.

  - When a PC with a resolution of 1920x1080@60Hz is connected to the **HDMI IN 2 (DVI)** port, you should set the **HDMI2/DVI** mode to **PC** in the **Edit Name** of the **Input** mode.
  - When connecting an HDMI/DVI cable to the **HDMI IN 2(DVI)** port, you should set the **HDMI2/DVI** mode to **DVI** or **DVI PC** in the **Edit Name** of the **Input** mode. In this case, a separate sound connection is required.

Supported Program

❑ Self Diagnosis

Picture Test

If you think you have a picture problem, perform the picture test. Check the color pattern on the screen to see if the problem still exists.

- **Does the problem still exist with this test photo?** appears on the screen.If the test pattern does not appear or there is noise in the test pattern, select Yes. If the test pattern is properly displayed, select **No**.
- **Yes** : There may be a problem with the TV. Contact Samsung's Call Center for assistance.
- **No** : There may be a problem with your external equipment. Please check your connections. If the problem still persists, refer to the external device's user manual.

Sound Test

If you think you have a sound problem, please perform the sound test.You can check the sound by playing a built-in melody sound through the TV.

- **Does the problem still exist with this sound test?** appears on the screen.If during the sound test you can hear sound only from one speaker or not at all, select **Yes**. If you can hear sound from the speakers, select **No**.
- **Yes** : There may be a problem with the TV. Contact Samsung's Call Center for assistance.
- **No** : There may be a problem with your external equipment. Please check your connections. If the problem still persists, refer to the external device's user manual.
- If you hear no sound from the TV's speakers, before performing the sound test, make sure **Speaker Select** is set to **TV speaker** in the **Sound** menu.
- The melody will be heard during the test even if **Speaker Select** is set to **External Speaker** or the sound is muted by pressing the **MUTE** button.

Signal Strength (Digital channels only)

You can adjust your antenna to improve the reception of available digital channels.

- If the signal strength meter indicates that the signal is weak, physically adjust your antenna to increase the signal strength. Continue to adjust the antenna until you find the best position with the strongest signal.

❑ Software Upgrade

To keep your product up-to-date with new Digital Television features then software upgrades are periodically broadcast as part of the normal Television signal. It will automatically detect these signals and display the software upgrade banner. You are given the option to install the upgrade.

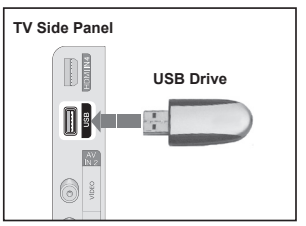

By USB

Insert a USB drive containing the firmware upgrade into TV. Please be careful to not disconnect the power or remove the USB drive while upgrades are being applied. The TV will turn off and turn on automatically after completing the firmware upgrade. Please check the firmware version after the upgrades are complete. When software is upgraded, video and audio settings you have made will return to their default (factory) settings. We recommend you write down your settings so that you can easily reset them after the upgrade.

By Channel

Upgrades the software using the broadcasting signal.

Standby Mode Upgrade

To continue software upgrade with master power on, select on by pressing the ▲ or ▼ button. 45 minutes after entering standby mode, a manual upgrade is automatically conducted. Since the power of the unit is turned on internally, the screen may be on slightly for the product. This phenomenon may continue for more than 1 hour until the software upgrade is completed.

Alternative Software

Replace the current software with the alternative.

❑ HD Connection Guide

The brief instruction on **How to get the best performance from your HD TV** is displayed. We offer the connection method for HD devices.

- You can change previous or next page by pressing the ◄ or ► button.

❑ Contact Samsung

You can know the Samsung Call center, website and information for product.

Media Play

Connecting a USB Device

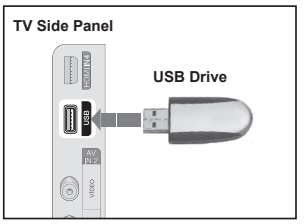

1. Press the **POWER** button to turn the TV on.
2. Connect a USB device containing photo, music and movie files to the USB jack on the side of the TV.

- If you enter the Media Play mode with no USB device connected the message **No external storage device found. Check the connection status.** will appear. In this case, insert the USB device, exit the screen by pressing the **MEDIA.P** button on the remote control and enter the **Media Play** screen again.
- Media Play only supports USB Mass Storage Class devices (MSC). MSC is a Mass Storage Class Bulk-Only Transport device. Examples of MSC are Thumb drives and Flash Card Readers (Both USB HDD and HUB are not supported.)
- MTP (Media Transfer Protocol) is not supported.
- The file system only supports FAT16/32 (The NTFS file system is not supported).
- Certain types of USB Digital camera and audio devices may not be compatible with this TV.
- Please connect directly to the USB port of your TV. If you are using a separate cable connection, there may be a USB compatibility problem.
- Before connecting your device to the TV, please back up your files to prevent them from damage or loss of data. SAMSUNG is not responsible for any data file damage or data loss.
- Do not disconnect the USB device while it is loading.
- MSC supports MP3 and JPEG files, while a PTP device supports JPEG files only.
- The sequential JPEG format is supported.
- The higher the resolution of the image, the longer it takes to display on the screen.
- The maximum supported JPEG resolution is 15360X8640 pixels.
- For unsupported or corrupted files, the **Not Supported File Format** message is displayed.
- If the number of photo files exceeds 4000 (or the number of music files exceeds 3000), any files exceeding the 4000 limit may not be displayed in the Photo List (or Music List).
- MP3 files with DRM that have been downloaded from a non-free site cannot be played.
- MP3 files with DRM downloaded from pay sites are not played.
- DRM(Digital Rights Management) prevents illegal uses of digital media for copyright protection.
- When moving to a photo, loading may take a few seconds. At this point, the loading icon will appear at the screen.
-

Using the Media Play Function

This function enables you to view and listen to photo, music and movie files saved on a USB Mass Storage Class (MSC) device. It might not work properly with unlicensed multimedia files.

❑ Entering the Media Play Menu

1. Press the **MENU** button. Press the ▲ or ▼ button to select Application, then press the **ENTER** ↵ button.
2. Press the ▲ or ▼ button to select **Media Play (USB)**, then press the **ENTER** ↵ button.
   - The **Media Play** menu is displayed.
   - Press the **SOURCE** button on the remote control repeatedly to select **USB**, then press the **ENTER** ↵ button.
   - Press the **MEDIA.P** button on the remote control to display the **Media Play** menu.
3. Press the Red button, then press the ▲ or ▼ button to select the corresponding USB Memory Device (i.e. if connected through a hub). Press the **ENTER** ↵ button.
   - This function differs depending on the USB Memory **Device** connected to TV.
   - The selected USB device name appears at the bottom left of the screen.
4. Press the ◄ or ► button to select an icon (**Photo, Music, Setup**), then press the **ENTER** ↵ button.
   - To exit **Media Play** mode, press the **MEDIA.P** button on the remote control.

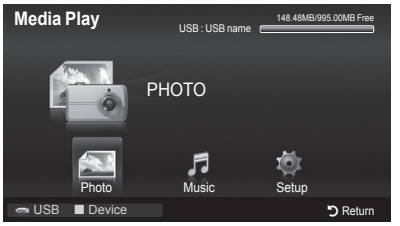





❑ Removing a USB Memory Device Safely

You can remove the device safely from the TV.

1. Press the **TOOLS** button in the Media Play file list screen, or while a SlideShow or music file is being played.
2. Press the ▲ or ▼ button to **select Remove Safely**, then press the **ENTER** ↵ button.
3. Remove the USB device from the TV.

❑ Screen Display

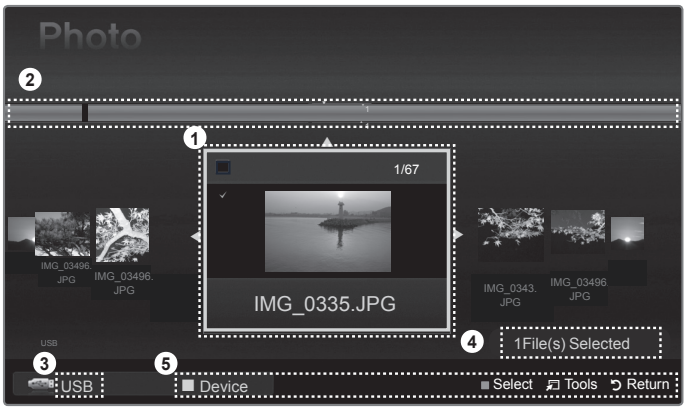

1. Currently selected file: The currently selected file is highlighted.
2. View Groups: The sorting group including the currently selected photo is highlighted.
3. Current Device: Shows the currently selected device name.
4. Item Selection Information: Shows the number of photos that are selected by pressing the Yellow button.
5. Help Items

- Red (**Device**) button: Selects a connected device.
- Yellow (**Select**) button: Selects file from the file list. Selected files are marked with a symbol ✓. Press the yellow button again to cancel a file selection.
- **TOOLS** (Tools) button: Displays the option menus. (The tools menu changes according to the current status.)
- **Return** (Return) button: Return to previous menu.

❑ Using the Remote Control Button in Media Play Menu

Button	Operations
▲/▼/◄/►	Move the cursor and select an item.
ENTER ↵	Select the currently selected item. Play or pause the files while playing the slide show or music files.
▶ / ⏸	Play or pause the Slide Show or Music file.
RETURN	Return to the previous menu.
TOOLS	Run various functions from the Photo, Music and Movie menus.
■	Stop the current slide show, Music or Movie file.
INFO	Show file information.
MEDIA.P	Exit Media Play mode.
P ∧ / ∨	Stop Media Play mode and Returns to TV mode.
EXIT	Stop the current function and return to the Media Play main menu.

Using and Sorting Photo List

You can sort photos in the Photo List by a particular standard.

1. Press the **MEDIA.P** button on the remote control to display the Media Play menu.
2. Press the ◄ or ► button to select **Photo**, then press the **ENTER** ↵ button.
3. Press the ▶ (Play)/**ENTER** ↵ button to start the Slide Show in the order selected by the user.

- The information of a photo file is automatically set.
- Photos for which information cannot be displayed are set as **Unclassified**.
- PTP does not support folder sort mode.

❑ Photo List Tools Menu

- **Slide Show**
  You can play a Slide Show using the photo files on the USB memory device.
- **Play Current Group**
  You can play a Slide Show using only the photo files in the currently selected sorting group.
- **Information**
  The photo file information including the name, the size, the resolution, the date modified and the path is displayed.
  - You can view the information of photo files during a Slide Show using the same procedures.
  - Alternatively, select a photo from the photo list and press the **INFO** button to view the information.



- **Remove Safely**
  You can remove the device safely from the TV.

Viewing a Photo or Slide Show

❑ Viewing a Slide Show



1. Press the ◄ or ► button to select the desired photo in the Photo list.
2. Press the **TOOLS** button.
3. Press the ▲ or ▼ button to select Slide Show, then press the **ENTER** button.
   - All files in the photo list will be used for the Slide Show.

- During the slide show, files are displayed in order from the currently shown file.
- The Slide Show progresses in the order sorted in the Photo list.
- Music files can be automatically played during the Slide Show if the Background Music is set to On.
- While a photo list is displayed, press the (Play)/ **ENTER** button on the remote control to start slide show.

SlideShow Control Buttons

ENTER	Play/Pauses the Slide Show.		Exit Slide Show and return to the photo list.
	Play the Slide Show.	**TOOLS**	Run various functions from the Photo menus.
	Pause the Slide Show.	/	Change the SlideShow playing speed.

❑ Playing the selected photo files

1. Press the ◄ or ► button to select the desired photo in the Photo list.
2. Press the yellow button. Repeat the above operation to select multiple photos.
   - The ✓ mark appears to the left of the selected photo.
   - To deselect all selected files, press the **TOOLS** button and select **Deselect All**.
3. Press the (Play) / **ENTER** button.
   - The selected files will be used for the Slide Show.

❑ Slide Show Tools Menu

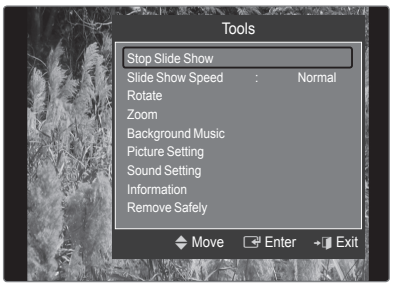

- **Stop Slide Show / Start Slide Show**
  You can start or stop a SlideShow.
- **Slide Show Speed → Normal / Slow / Fast**
  You can select the slide show speed only during the slide show.
  - You can also change the speed of the Slide Show by pressing the (REW) or (FF) button during the Slide Show.
- **Rotate → 0˚/ 90˚ / 180˚ / 270˚**
  You can rotate photos saved on a USB memory device.
  - The rotated file is not saved.
- **Zoom → x1 / x2 / x4**
  You can magnify photos saved on a USB memory device.
  - To move the enlarged photo image, press the **ENTER** button, then press the ▲/▼/◄/► buttons. Note that when the enlarged picture is smaller than the original screen size, the location change function doesn't work.
  - The enlarged file is not saved.
- **Background Music**
  You can set and select background music when watching a Slide Show.
  - To use this feature, there must be music on the USB device.
  - Loading music files is needed to change BGM mode. Play music files in music category to load.
  - **Background Music → On / Off**
  - **Select Music File**
    - If you set **Background Music** to **On**, you can select a music file.
- **Picture Setting / Sound Setting**
  Refer to page 33.
- **Information**
  The photo file information is displayed.
- **Remove Safely**
  You can remove the device safely from the TV.

Using and Sorting the Music List

You can sort music files in the Music List by a particular standard.

1. Press the **MEDIA.P** button on the remote control to display the Media Play menu.
2. Press the ◄ or ► button to select **Music**, then press the **ENTER** ↵ button.
3. Press the **ENTER** ↵ button to start playing music in the order selected by the user.

   The information of the music files is automatically set.
   If there is no title information for a music file, the filename is displayed.

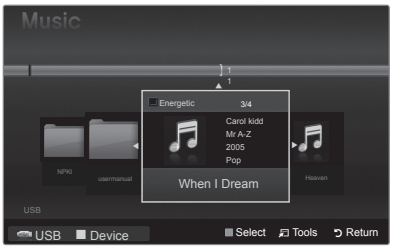

❑ Music List Tools Menu



- **Play Current Group**
  You can only play music files in the currently selected sorting group.
- **Information**
  The music file information including the name, the size, the date modified and the path is displayed.
  Alternatively, select a music file from the music list and press the **INFO** button to view the information.
- **Remove Safely**
  You can remove the device safely from the TV.

Playing a Music

❑ Playing a music file

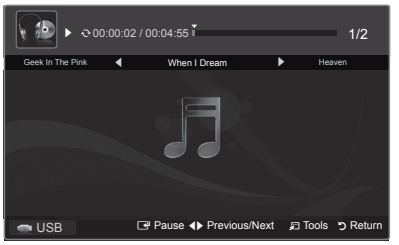

1. Pressing the ◄ or ► button to select a music file to be played.
2. Press the (Play)/**ENTER** button.
   - This menu only shows files with the MP3 file extension. Files with other file extensions are not displayed, even if they are saved on the same USB device.
   - (REW) or (FF) buttons do not function during play.
   - The selected file is displayed at the top with its playing time.
   - To adjust the music volume, press the volume button on the remote control. To mute the sound, press the **MUTE** button on the remote control.
   - The playing duration of a music file may be displayed as '00:00:00' if its playing time information is not found at the start of the file.

Music Play Control Buttons

ENTER	Play/Pauses the music file.		Exit play mode and return to the music list.
	Play the music file	**TOOLS**	Run various functions from the Music menus.
	Pause the music file		

Music function information icon

	When all music files in the folder (or the selected file) are repeated. **Repeat Mode** is **On**.
	When all music files in the folder (or the selected file) are played once. **Repeat Mode** is **Off**.

❑ Playing the selected music files

1. Press the ◄ or ► button to select the desired music file in the music list.
2. Press the yellow button. Repeat the above operation to select multiple music files.
   - The ✓ mark appears to the left of the selected music file.
   - To deselect all selected files, press the **TOOLS** button and select **Deselect All**.
3. Press the (Play)/**ENTER** button.
   - Only the selected file is played.

❑ Music Play Tools Menu

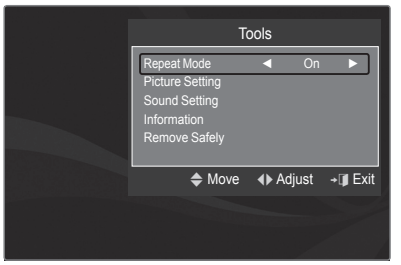

- **Repeat Mode → On/Off**
  You can play music files repeatedly.
- **Picture Setting / Sound Setting**
  Refer to page 33.
- **Information**
  The music file information is displayed.
- **Remove Safely**
  You can remove the device safely from the TV.

Picture / Music Settings Using Media Play

When watching a SlideShow or listening to music using Media Play, you can set the picture and sound.

❑ Picture Setting

1. Press the **TOOLS** button during a Slide Show or while music is playing.
2. Press the ▲ or ▼ button to select **Picture Setting**.
3. Press the ◄ or ► button to select the **Picture Mode** (**Dynamic**, **Standard**, **Eco**, or **Movie**).
4. Press the ▲ or ▼ button to move to an item. (**Contrast**, **Brightness**, **Color**, **Dynamic Contrast**, **Black Tone**, or **Reset**)
   Select Reset to initialize the picture settings.
5. Press the ◄ or ► button to adjust the settings.

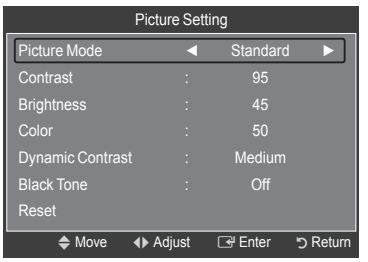

❑ Sound Setting

1. Press the **TOOLS** button during a Slide Show or while music is playing.
2. Press the ▲ or ▼ button to select **Sound Setting**.
3. Press the ◄ or ► button to select the **Sound Mode**. (**Standard**, **Music**, **Movie**, **Clear voice**, or **Custom**)
4. Press the ▲ or ▼ button to move to an item. (**Balance, 100Hz / 300Hz / 1kHz / 3kHz / 10kHz** (Bandwidth Adjustment), or **Reset**)
   Select Reset to initialize the sound settings.
5. Press the ◄ or ► button to adjust the settings.

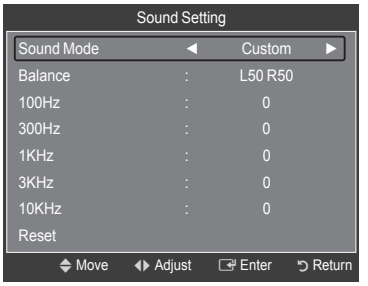

Using the Setup Menu

Setup displays the user settings of the **Media Play** menu.

1. Press the **MEDIA.P** button on the remote control to display the **Media Play** menu.
2. Press the ◄ or ► button to select **Setup**, then press the **ENTER** ↵ button.
3. Press the ▲ or ▼ button to select the desired option.
4. Press the ◄ or ► button to select the option, then press the **ENTER** ↵ button.

   To exit **Media Play** mode, press the **MEDIA.P** button on the remote control.

- **Music Repeat Mode → On / Off**
  Select to repeatedly play music files.
- **Screen Saver Run Time → 10 min / 20 min / 40 min / 1 hour**
  Select to set the waiting time before the screen saver appears.
- **Information**
  Select to viewing the information of the connected device.
- **Remove Safely**
  You can remove the device safely from the TV.

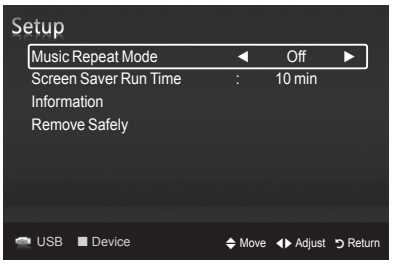

About Anynet+

Connecting Anynet+ Devices

Anynet+ is a function that enables you to control all connected Samsung devices that support Anynet+ with your Samsung TV's remote.

The Anynet+ system can be used only with Samsung devices that have the Anynet+ feature. To be sure your Samsung device has this feature, check if there is an Anynet+ logo on it.

❑ To connect to a TV

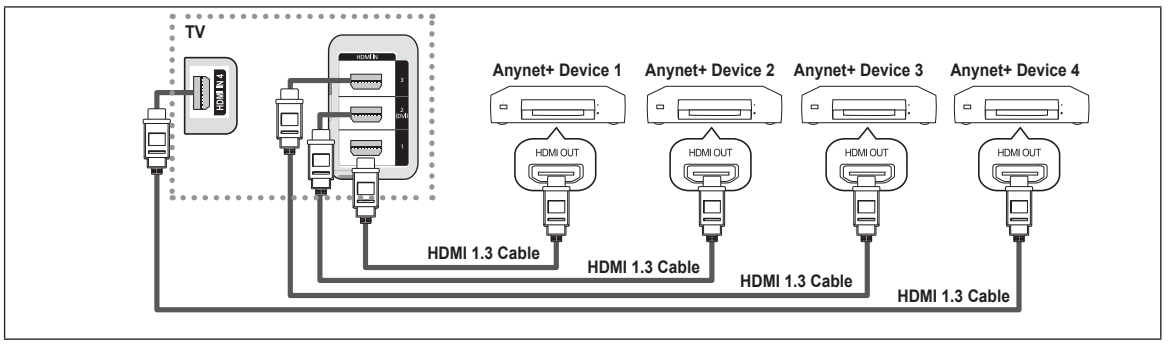

1. Connect the [HDMI IN 1], [HDMI IN 2 (DVI)], [HDMI IN 3], or [HDMI IN 4] jack on the TV and the HDMI OUT jack of the corresponding Anynet+ device using an HDMI cable.

❑ To connect to Home Theater

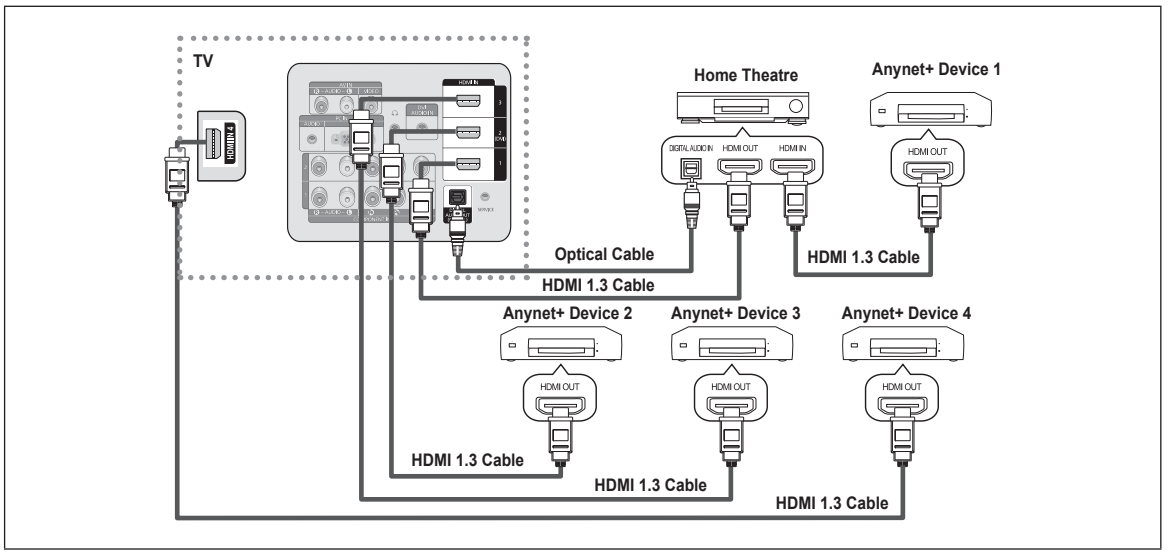

1. Connect the [HDMI IN 1], [HDMI IN 2 (DVI)], [HDMI IN 3], or [HDMI IN 4] jack on the TV and the HDMI OUT jack of the corresponding Anynet+ device using an HDMI cable.

2. Connect the HDMI IN jack of the home theater and the HDMI OUT jack of the corresponding Anynet+ device using an HDMI cable.

- Connect the Optical cable between the DIGITAL AUDIO OUT (OPTICAL) jack on your TV and the Digital Audio Input on the Home Theater.
- When following the connection above, the Optical jack only outputs 2 channel audio. You will only hear sound from the Home Theater's Front Left and Right speakers and the subwoofer. If you want to hear 5.1 channel audio, connect the Digital Audio Out (Optical) jack on the DVD player or Cable/Satellite Box (ie Anynet Device 1 or 2) directly to the Amplifier or Home Theater, not the TV.
- Connect only one Home Theater.
- You can connect an Anynet+ device using the HDMI 1.3 cable. Some HDMI cables may not support Anynet+ functions.
- Anynet+ works when the AV device supporting Anynet+ is in the Standby or On status.
- Anynet+ supports up to 12 AV devices in total. Note that you can connect up to 3 devices of the same type.

Setting Up Anynet+

The following settings help set the Anynet+ functions.

Press the **TOOLS** button to display **Tools** menu.
You can also display Anynet+ menu by selecting **Tools** → **Anynet+(HDMI-CEC)**.

❑ Setup

- **Anynet+(HDMI-CEC)** → **Off / On**
  To use the Anynet+ Function, **Anynet+ (HDMI-CEC)** must be set to **On**.
  - When the **Anynet+ (HDMI-CEC)** function is disabled, all the Anynet+ related operations are deactivated.

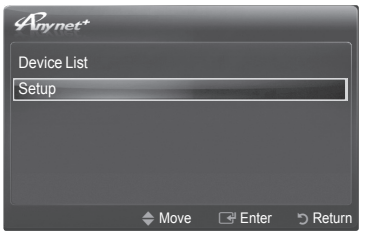

- **Auto Turn Off** → **No / Yes**
  Setting an Anynet+ Device to turn Off Automatically when the TV is Turned Off
  - The active source on the TV remote must be set to TV to use the Anynet+ function.
  - If you set **Auto Turn Off** to **Yes**, connected external devices are also turned off when the TV is turned off. If an external device is still recording, it may or may not turn off.

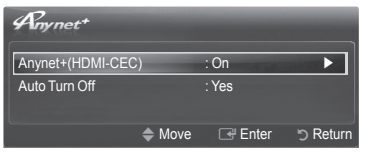

Scanning and Switching between Anynet+ Devices

1. Press the **TOOLS** button. Press the **ENTER** button to select **Anynet+ (HDMI-CEC)**.
2. Press the ▲ or ▼ button to select **Device List**, then press the **ENTER** button.
   - Anynet+ devices connected to the TV are listed. If you cannot find a device you want, press the red button to scan for devices.
   - Only when you set **Anynet+ (HDMI-CEC)** to **On** in the **Setup** menu, the **Device List** menu appears.
3. Press the ▲ or ▼ button to select to a particular device and press the **ENTER** button. It is switched to the selected device.

- Switching to the selected devices may take up to 2 minutes. You cannot cancel the operation during the switching operation.
- The time required to scan for devices is determined by the number of connected devices.
- When the device scan is complete, the number of devices found are not displayed.
- Although the TV automatically searches the device list when the TV is turned on via the power button, devices connected to the TV when the TV is on or under some conditions are not automatically displayed in the device list. Press the red button to search for the connected device.
- If you have selected external input mode by pressing the **SOURCE** button, you cannot use the Anynet+ function. Make sure to switch to an Anynet+ device by using the **Device List**.

Continued...

❑ Anynet+ Menu

The **Anynet+** menu changes depending on the type and status of the Anynet+ devices connected to the TV.

Anynet+ Menu	Description
View TV	Anynet+ mode changes to TV broadcast mode.
Device List	Shows the Anynet+ device list.
(device_name) MENU	Shows the connected device menus. E.g. If a DVD recorder is connected, the disc menu of the DVD recorder will appear.
(device_name) INFO	Shows the play menu of the connected device. E.g. If a DVD recorder is connected, the play menu of the DVD recorder will appear.
Record: (*recorder)	Starts recording immediately using the recorder. (This is only available for devices that support the recording function.)
(*recorder) Reserve Recording	Enables reserving a recording for the recorder. (This is only available for devices that support the recording reservation function.)
Stop Recording: (*recorder)	Stops recording.
Receiver	Sound is played through the receiver.

✎ If more than one recording device is connected, they are displayed as (*recorder) and if only one recording device is connected, it will be represented as (*device_name).

❑ TV Remote Control Buttons Available in Anynet+ Mode

Device Type	Operating Status	Available Buttons
Anynet+ Device	After switching to the device, when the menu of the corresponding device is displayed on the screen.	Numeric buttons ▲/▼/◄/►/**ENTER** buttons Colour buttons / **EXIT** button
	After switching to the device, while playing a file	(Backward search) / (Forward search) (Stop) / (Play) / (Pause)
Device with built-in Tuner	After switching to the device, when you are watching a TV programme	**P** / button
Audio Device	When Receiver is activated	/ button **MUTE** button

✎ The Anynet+ function only works when the active source on the TV remote control is set to TV.
✎ The button works only while in the recordable state.
✎ You cannot control Anynet+ devices using the buttons on the TV. You can control Anynet+ devices only using the TV remote control.
✎ The TV remote control may not work under certain conditions. In this case, reselect the Anynet+ device.
✎ The Anynet+ functions do not operate with other manufacturers' products.
✎ The , operations may differ depending on the device.

Recording

You can make a recording of a TV programme using a Samsung recorder.

1. Press the **TOOLS** button. Press the **ENTER** button to select **Anynet+ (HDMI-CEC)**.
2. Press the ▲ or ▼ button to select **Record: (device_name)**, then press the **ENTER** button. Recording begins.

✎ **When there is more than one recording device**
When multiple recording devices are connected, the recording devices are listed. Press the ▲ or ▼ button to select a recording device and press the **ENTER** button. Recording begins.

✎ **When the recording device is not displayed**
Select **Device List** and press the red button to search devices.

✎ You can record the source streams by selecting **Record: (device_name)**.
✎ Pressing the button will record whatever you are currently watching. If you are watching video from another device, the video from the device is recorded.
✎ Before recording, check whether the antenna jack is properly connected to the recording device. To properly connect an antenna to a recording device, refer to the recording device's users manual.

Listening through a Receiver (Home theater)

You can listen to sound through a receiver instead of the TV speaker.

1. Press the **TOOLS** button. Press the **ENTER** button to select **Anynet+ (HDMI-CEC)**.
2. Press the ▲ or ▼ button to select **Receiver**. Press the ◄ or ► button to select **On** or **Off**.

- If your receiver supports audio only, it may not appear in the device list.
- The receiver will work when you have properly connected the Optical IN jack of the receiver to the Optical Out jack of the TV.
- When the receiver (home theater) is set to On, you can hear sound output from the TV's Optical jack. When the TV is displaying a DTV(air) signal, the TV will send out 5.1 channel sound to the Home theater receiver. When the source is a digital component such as a DVD and is connected to the TV via HDMI, only 2 channel sound will be heard from the Home Theater receiver.
- When listening through the receiver, there are restrictions for using the audio-related menus.
- If there is a power interruption to the TV when the **Receiver** is set to **On** (by disconnecting the power cord or a power failure), the **Speaker Select** may be set to **External Speaker** when you turn the TV on again. (see page 21)

Troubleshooting for Anynet+

Symptom	Solution
Anynet+ does not work.	• Check if the device is an Anynet+ device. The Anynet+ system supports Anynet+ devices only. • Connect only one receiver (home theater). • Check if the Anynet+ device power cord is properly connected. • Check the Anynet+ device's Video/Audio/HDMI 1.3 cable connections. • Check whether **Anynet+ (HDMI-CEC)** is set to **On** in the Anynet+ setup menu. • Check whether the TV remote control is in TV mode. • Check whether it is Anynet+ exclusive remote control. • Anynet+ doesn't work in certain situations. (Searching channels, Operating WISELINK Pro, Plug & Play, etc.) • When connecting or removing the HDMI 1.3 cable, please make sure to search devices again or turn your TV off and on again. • Check if the Anynet+ Function of Anynet+ device is set on.
I want to start Anynet+.	• Check if the Anynet+ device is properly connected to the TV and check if the **Anynet+ (HDMI-CEC)** is set to **On** in the Anynet+ Setup menu. • Press the **TV** button on the TV remote control to switch to TV. Then press the **TOOLS** button to show the **Anynet+** menu and select a menu you want.
I want to exit Anynet+.	• Select View TV in the Anynet+ menu. • Press the **SOURCE** button on the TV remote control and select a device other than Anynet+ devices. • (Note that the channel button operates only when a tuner-embedded Anynet+ device is not connected.)
The message Connecting to Anynet+ device... appears on the screen.	• You cannot use the remote control when you are configuring Anynet+ or switching to a view mode. • Use the remote control when the Anynet+ setting or switching to view mode is complete.
The Anynet+ device does not play.	• You cannot use the play function when Plug & Play is in progress.
The connected device is not displayed.	• Check whether or not the device supports Anynet+ functions. • Check whether or not the HDMI 1.3 cable is properly connected. • Check whether **Anynet+ (HDMI-CEC)** is set to **On** in the Anynet+ setup menu. • Search Anynet+ devices again. • You can connect an Anynet+ device using the HDMI 1.3 cable only. Some HDMI cables may not support Anynet+ functions. • If it is terminated by an abnormal situation such as disconnecting the HDMI cable or power cord or a power failure, please repeat the device scan.
The TV programme cannot be recorded.	• Check whether the antenna jack on the recording device is properly connected.
The TV sound is not output through the receiver.	• Connect the optical cable between TV and the receiver.

Recommendations for Use

Teletext Feature

Most television stations provide written information services via Teletext. The index page of the teletext service gives you information on how to use the service. In addition, you can select various options to suit your requirements by using the remote control buttons.

For teletext information to be displayed correctly, channel reception must be stable. Otherwise, information may be missing or some pages may not be displayed.

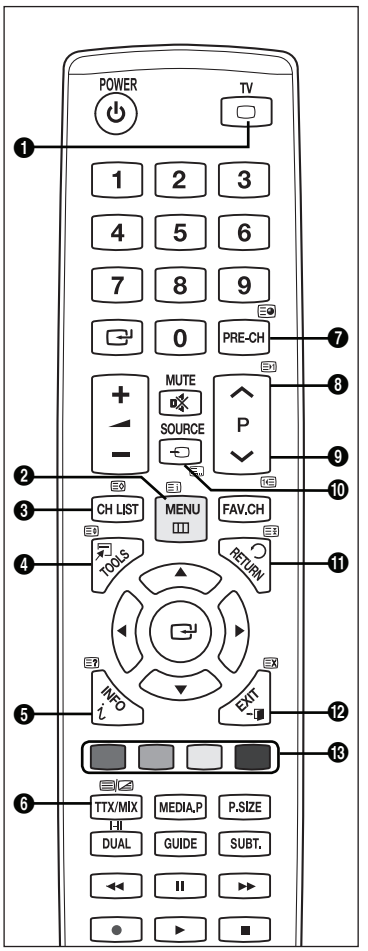

❶ **(exit)**

Exit from the teletext display.

❷ **(index)**

Used to display the index (contents) page at any time while you are viewing teletext.

❸ **(store)**

Used to store the teletext pages.

❹ **(size)**

Press to display the double-size letters in the upper half of the screen. For lower half of the screen, press it again. To display normal screen, press it once again.

❺ **(reveal)**

Used to display the hidden text (answers to quiz games, for example). To display normal screen, press it again.

❻ **(teletext on/mix)**

Press to activate teletext mode after selecting the channel providing the teletext service. Press it twice to overlap the teletext with the current broadcasting screen.

❼ **(sub-page)**

Used to display the available sub-page.

❽ **(page up)**

Used to display the next teletext page.

❾ **(page down)**

Used to display the previous teletext page.

❿ **(mode)**

Press to select the teletext mode (LIST/FLOF). If you press it in the LIST mode, it switches into the List save mode. In the List save mode, you can save teletext page into list using the (store) button.

⓫ **(hold)**

Used to hold the display on a given page if the selected page is linked with several secondary pages which follow on automatically. To resume, press it again.

⓬ **(cancel)**

Used to display the broadcast when searching for a page.

⓭ **Colour buttons (red/green/yellow/blue)**

If the FASTEXT system is used by a broadcasting company, the different topics covered on a teletext page are colour-coded and can be selected by pressing the coloured buttons. Press one of them corresponding to the required. The page is displayed with other coloured information that can be selected in the same way. To display the previous or next page, press the corresponding coloured button.

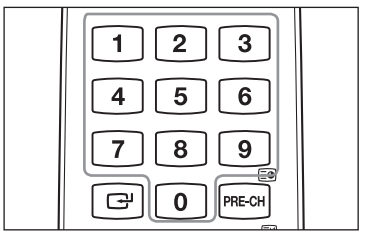

You can change teletext pages by pressing the numeric buttons on the remote control.

Continued...

The teletext pages are organized according to six categories:

Part	Contents
A	Selected page number.
B	Broadcasting channel identity.
C	Current page number or search indications.
D	Date and time.
E	Text.
F	Status information.
	FASTEXT information.

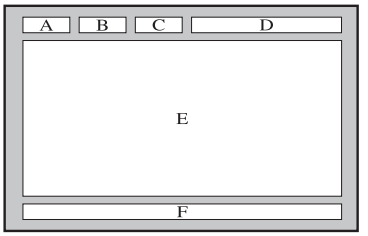

- Teletext information is often divided between several pages displayed in sequence, which can be accessed by:
  - Entering the page number
  - Selecting a title in a list
  - Selecting a coloured heading (FASTEXT system)

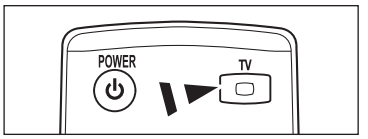

- Press the **TV** button to exit from the teletext display.

Wall Mount Kit Specifications (VESA)

Install your wall mount on a solid wall perpendicular to the floor.
When attaching to other building materials, please contact your nearest dealer.
If installed on a ceiling or slanted wall, it may fall and result in severe personal injury.

Product Family	inch	VESA Spec. (A * B)	Standard Screw	Quantity
LCD-TV	19" ~22"	100 * 100	M4	4
	23"~29"	200 * 100		
	30"~40"	200 * 200	M6	
	46"~55"	400 * 400	M8	
	57"~70"	800 * 400		
	80" ~	1400 * 800		
PDP-TV	42"~ 50"	400 * 400	M8	4
	58"~ 63"	600 * 400		
	70" ~	800 * 400		
	80" ~	1400 * 800		

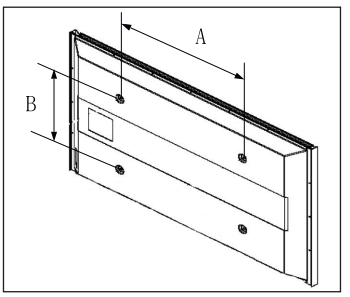

- We provided the standard dimensions for wall mount kits as shown in the table above.
- When purchasing our wall mount kit, a detailed installation manual and all parts necessary for assembly are provided.
- Do not use screws longer than the standard dimension, as they may cause damage to the inside of the TV set.
- For wall mounts that do not comply with the VESA standard screw specifications, the length of the screws may differ depending on their specifications.
- Do not use screws that do not comply with the VESA standard screw specifications.
  Do not use fasten the screws too strongly, this may damage the product or cause the product to fall, leading to personal injury.
  Samsung is not liable for these kinds of accidents.
- Samsung is not liable for product damage or personal injury when a non-VESA or non-specified wall mount is used or the consumer fails to follow the product installation instructions.
- Our 57” and 63” models do not comply with VESA Specifications. Therefore, you should use our dedicated wall mount kit for this model.
- Do not exceed 15 degrees tilt when mounting this TV.

> Do not install your Wall Mount Kit while your TV is turned on.
> It may result in personal injury due to electric shock.

Preparing before installing Wall- Mount on the wall

Case A. Installing SAMSUNG Wall-Mount

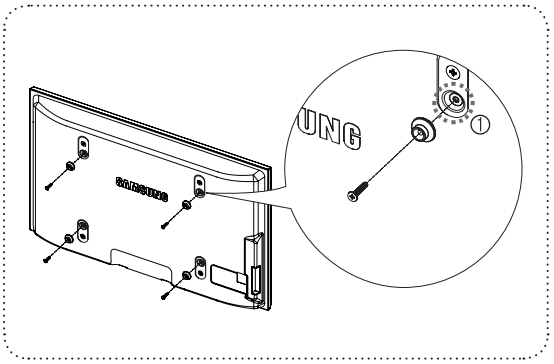

Case B. Installing other company's Wall-Mount

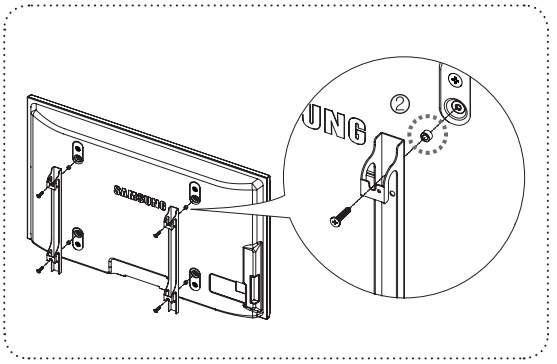

1. Install Wall Mount with the torque range of 15kgf·cm or less. Make sure that parts can be damaged if the torque is out of the specified range.
2. Accessory Kit contains Holder–Ring [②] for installing other company's Wall-Mount on Samsung TV. (Case B)

   Screw down the hole [①] when installing wall-mount on the wall.

How to assemble the Stand-Base **(depending on the model)**

Using the screws for securing the stand base and the monitor, firmly attach the monitor to the stand base.
(The exterior of the set may be different than the picture.)

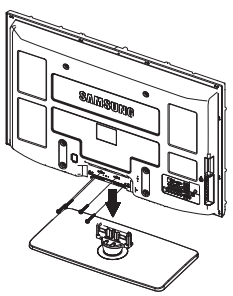

(PS50B550)

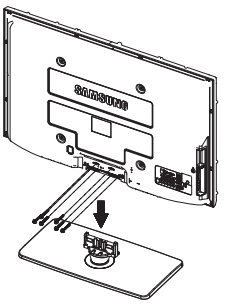

(PS58B550)

Warning

Firmly secure the stand to the TV before moving it, as the stand may fall and could cause serious injury.

Two or more people should carry the TV. Never lay the TV on the floor because of possible damage to the screen.
Always store the TV upright.

In case of installing your TV on the wall, close the cover (❶) on the stand-base connection part using two screws for hiding.

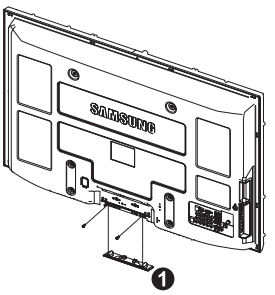

Securing the TV to the Wall

Pulling, pushing, or climbing on the TV may cause the TV to fall. In particular, ensure your children do not hang over or destabilize the TV; doing so may cause the TV to tip over, causing serious injuries or death. Follow all safety precautions provided on the included Safety Flyer. For added stability, install the anti-fall device for safety purposes, as follows.

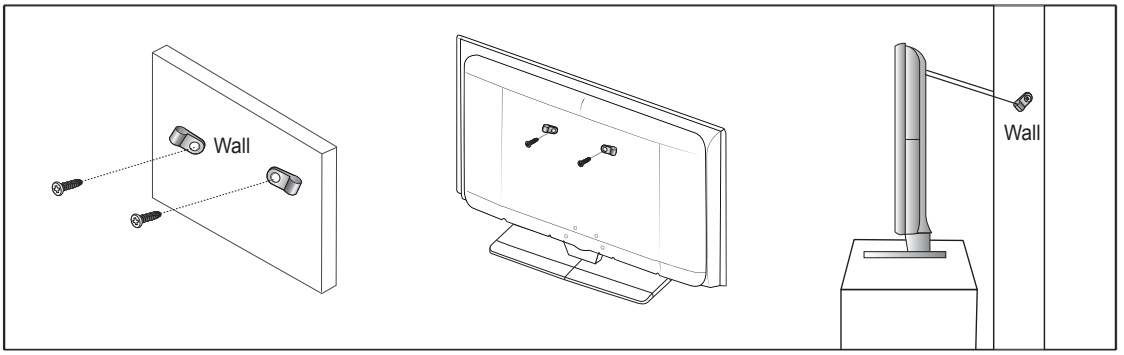

To avoid the TV from falling

1. Put the screws into the clamps and firmly fasten them onto the wall. Confirm that the screws have been firmly installed onto the wall.
   - You may need additional material such as an anchor depending on the type of wall.
   - Since the necessary clamps, screws, and string are not supplied, please purchase these additionally.
2. Remove the screws from the center back of the TV, put the screws into the clamps, and then fasten the screws onto the TV again.
   - Screws may not be supplied with the product.
3. Connect the clamps fixed onto the TV and the clamps fixed onto the wall with a strong string and then tie the string tightly.
   - Install the TV near to the wall so that it does not fall backwards.
   - It is safe to connect the string so that the clamps fixed on the wall are equal to or lower than the clamps fixed on the TV.
   - Untie the string before moving the TV.
4. Verify all connections are properly secured. Periodically check connections for any sign of fatigue for failure. If you have any doubt about the security of your connections,contact a professional installer.

Securing the Installation Space

Keep the required distances between the product and other objects (e.g. walls) to ensure proper ventilation.
Failing to do so may result in fire or a problem with the product due to an increase in the internal temperature of the product.
Install the product so the required distances shown in the figure are kept.

- When using a stand or wall-mount, use parts provided by Samsung Electronics only.
  - If you use parts provided by another manufacturer, it may result in a problem with the product or an injury due to the product falling.
  - If you use parts provided by another manufacturer, it may result in a problem with the product or fire due to an increase in the internal temperature of the product due to poor ventilation.
- The appearance may differ depending on the product.

When installing the product with a stand

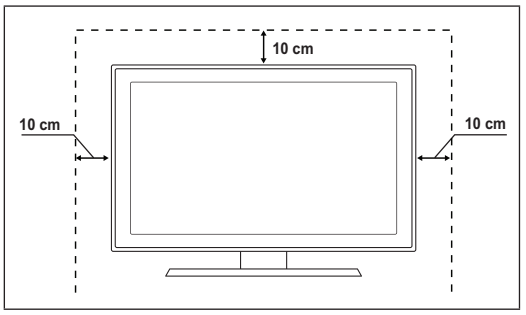

When installing the product with a wall-mount

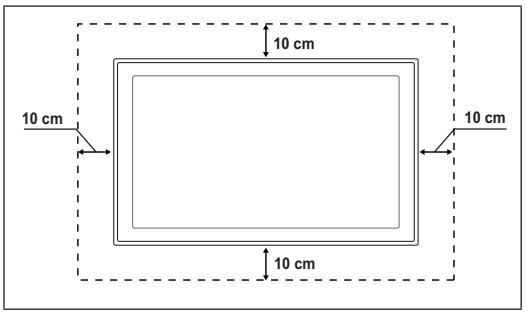

Troubleshooting

If the TV seems to have a problem, first try this list of possible problems and solutions.

Problem	Possible Solution
Picture Quality First of all, please perform the **Picture Test** to confirm that your TV is properly displaying test image. * Go to **MENU** → **Support** → **Self Diagnosis** → **Picture Test** If the test image is properly displayed, the poor picture may caused by the source or signal.	
TV image does not look as good as it did in the store.	• If you have an analog Cable/Set top box, upgrade to an Box. Use HDMI or Component cables to deliver HD picture quality. • Cable/Satellite subscriber : Try HD (High Definition) stations from channel line up. • Antenna connection: Try HD stations after performing Auto program Many HD channels are upscaled from SD (Standard Definition) contents. • Adjust Cable/Set top video output resolution to 1080i or 720p.
Picture is distorted: macroblock,small block, dots,pixelization.	• Compression of video contents may cause picture distortion especially on fast moving pictures such as sports and action movies. • Low signal level can cause picture distortion. This is not a TV issue. Have the antenna accessed.
Wrong or missing color with Component connection.	• Make sure the Component cables are connected to the correct jacks. Incorrect or loose connections may cause color problems or the screen will be blank.
Poor color or brightness.	• Adjust **Picture** options in the TV menu (**Picture Mode**, **Colour**, **Brightness**, **Sharpness**). • Adjust **Energy Saving** option in **Setup** menu. • Try picture reset to view the default picture setting. (Go to **MENU** → **Picture** → **Picture Reset**)
Dotted line on the edge of screen.	• If picture size is set to **Just scan**, change to **16:9**. • Change cable/satellite box resolution.
Picture is black and white with AV (Composite) input only.	• Confirm Composite (yellow) cable is in yellow jack in source as well as TV.
Picture freezes or is distorted when changing channels or picture is delayed.	• If connected with cable /set top box, please try to reset cable box. (reconnect AC cord and wait until cable box reboots. It may take up to 20 minutes) • Set output resolution of cable box to 1080i or 720p
Sound Quality First of all, please perform the **Sound Test** to confirm that your TV audio is properly operating. * Go to **MENU** → **Support** → **Self Diagnosis** → **Sound Test** If the audio is **OK**, the sound problem may caused by the source or signal.	
No sound or sound is too low at maximum volume.	• Please check the volume of device (Cable/Sat Box, DVD, Blu-ray etc) connected to your TV. Then, adjust the TV volume accordingly.
Picture is good but no sound.	• Set the **Speaker Select** option to **TV speaker** in the sound menu. • Make sure audio cables from an external device are connected to correct audio input jacks on the TV. • Check connected device's audio output option. Ex) You may need to change your cable box' audio option to HDMI when you have HDMI connected to your TV. • If you are using a DVI to HDMI cable, a separate audio cable is required. • Remove plug from headphone jack (if available on your TV). • Reboot the connected device by reconnecting the device's power cable.
Noise from speaker.	• Check cable connections. Make sure a video cable is not connected to an audio input. • For Antenna/Cable connection, check signal strength. Low signal level may cause sound distortion.

Continued...

Problem	Possible Solution
No Picture, No Video	
TV won't turn on.	• Make sure the AC power cord is plugged in securely to the wall outlet and the TV. • Make sure the wall outlet is working. • Try pressing the Power button on the TV to make sure the remote is working properly. If the TV turns on, it may be caused by Remote Control. To fix the Remote problem, refer to "Remote control does not work" below.
TV turns off automatically.	• Check if the **Sleep Timer** is set to **On** in the **Setup** menu. • If connected the TV to your PC, check your PC power settings. • Make sure the AC power cord is plugged in securely to the wall outlet and the TV. • If there is no signal for about 10 ~ 15 minutes with Antenna/Cable connection, the TV will turn off.
No picture/Video.	• Check cable connections. (remove and reconnect all cables of TV and external devices) • Set your external device's (Cable/Sat Box, DVD, Blu-ray etc) video output to match the connections to the TV input. For example, external device's output : HDMI , TV's input : HDMI. • Make sure your connected device is powered on. • Make sure to select the TV's correct source by pressing the **SOURCE** button on the remote control. • Reboot the connected device by reconnecting the device's power cable.
RF (Cable/Antenna) Connection	
Cannot receive all channels.	• Make sure coaxial cable is connected securely. • Please try **Plug & Play** to add available channels to the channel list. Go to **MENU** → **Setup** → **Plug & Play** and wait for all available channels are stored. • Verify Antenna is positioned correctly.
Picture is distorted : macroblock,small block,dots,pixelization.	• Compression of video contents may cause picture distortion especially on fast moving pictures such as sports and action movies. • Low signal level can cause picture distortion. This is not a TV issue. Have the antenna accessed
PC Connection	
"Not Supported Mode" message.	• Set your PC's output resolution so it matches the resolutions supported by the TV.
PC is always shown on source list even if not connected.	• This is normal; PC is always shown on the source list even though a PC is not connected.
Video is OK but there is no audio with HDMI connection.	• Check the audio output setting on your PC.

Continued...

Problem	Possible Solution
Others	
Picture is not shown in full screen.	• Black bars on each side will be shown on HD channels when displaying upscaled SD (4:3) contents. • Black bars on Top & Bottom will be shown on movies that have aspect ratios different from your TV. • Adjust picture size option on your external device or TV to full screen.
Remote control does not work.	• Replace the remote control batteries with correct polarity (+ -). • Clean the transmission window located on the top of the remote. • Try pointing the remote directly at the TV from 5~6 feet away.
Plasma TV is making humming noise.	• Plasma TVs typically make a soft humming sound. This is normal. It's caused by the electrical charges that are used to create the images on the screen. • If the humming sound is loud, you may have set the brightness on the TV too high. Try setting the brightness lower. • You can also have loud humming if the back of your Plasma TV is too close to a wall or other hard surface. Also try rerouting your connection cables. • Improper installation of wall mount can create excessive noise.
Image Retention (Burn In) Issue.	• To minimize the possibility of screen burn, this unit is equipped with screen burn reduction technology. Pixel Shift technology enables you to set picture movement up/down (Vertical Line) and side to side (Horizontal Dot).
Can not control TV power or volume with Cable/Sat box remote control.	• Program the Cable/Set top box remote control to operate the TV. Refer to Cable/Set top box user manual for SAMSUNG TV code.
"Not Supported Mode" message.	• Check the supported resolution of the TV and adjust the external device's output resolution accordingly. Refer to resolution settings in this manual.
Plastic smell from TV.	• This smell is normal and will dissipate over time.
TV Signal Strength is unavailable in the Self Diagnostic Test menu.	• This function is only available with digital channels with an Antenna (RF/Coax) connection.
TV is tilted to right or left side.	• Remove the stand base from TV and reassemble.
Can not assemble stand base.	• Make sure TV is placed on flat surface. If can not remove screws from TV, please use magnetized screw driver.
Channel menu is grey out (unavailable).	• Channel menu is only available when TV source is selected.
Your settings are lost after 30 minutes or every time TV is turned off.	• If TV is in the **Store Demo** mode, it will reset audio and picture settings every 30 minutes. Please change from **Store Demo** mode to **Home Use** mode in the **Plug & Play** procedure. Press the **SOURCE** button to select **TV** mode, go to **MENU** → **Setup** → **Plug & Play** → **ENTER**
Intermittent loss of audio or video.	• Check cable connections and reconnect. • Can be caused by using overly rigid or thick cables. Make sure the cables are flexible enough for long term use. If wall mounting, we recommend using cables with 90 degree connectors.
You may see small particles if you look closely at the edge of the bezel surrounding the TV screen.	• This is part of the product's design and is not a defect.

Some of above pictures and functions are available at specific models only.

Specifications

The descriptions and characteristics in this booklet are given for information purposes only and are subject to modification without notice.

Model Name	PS50B550	PS58B550
Screen Size (Diagonal)	50 inch	58 inch
PC Resolution (Optimum)	1920 x 1080 @ 60 Hz	1920 x 1080 @ 60 Hz
Sound (Output)	10 W x 2	15 W x 2
Dimension (WxHxD)		
Body	1240 x 766 x 74 mm	1418 x 866 x 74 mm
With stand	1240 x 822 x 290 mm	1418 x 924 x 335 mm
Weight		
Body	33.4 kg	38 kg
With stand	38.4 kg	45 kg
Environmental Considerations		
Operating Temperature	50 °F to 104 °F (10 °C to 40 °C)	
Operating Humidity	10% to 80%, non-condensing	
Storage Temperature	-4 °F to 113 °F (-20 °C to 45 °C)	
Storage Humidity	5% to 95%, non-condensing	

- This device is a Class B digital apparatus.
- Design and specifications are subject to change without prior notice.
- For the power supply and Power Consumption, refer to the label attached to the product.

Software License

This product uses parts of the software from the Independent JPEG Group. This product uses parts of the software owned by the Freetype Project (www.freetype.org). This product uses some software programs which are distributed under the GPL/LGPL license. Accordingly, the following GPL and LGPL software source codes that have been used in this product can be provided after asking to vdswmanager@samsung.com.
GPL software: Linux Kernel, Busybox, Binutils LGPL software: Glibc, ffmpeg, smpeg, libgphoto, libusb, SDL

❑ GNU GENERAL PUBLIC LICENSE

GNU GENERAL PUBLIC LICENSE

Version 3, 29 June 2007

Copyright (C) 2007 Free Software Foundation, Inc. <http://fsf.org/> Everyone is permitted to copy and distribute verbatim copies of this license document, but changing it is not allowed.

Preamble

The GNU General Public License is a free, copyleft license for software and other kinds of works.

The licenses for most software and other practical works are designed to take away your freedom to share and change the works. By contrast, the GNU General Public License is intended to guarantee your freedom to share and change all versions of a program--to make sure it remains free software for all its users. We, the Free Software Foundation, use the GNU General Public License for most of our software; it applies also to any other work released this way by its authors. You can apply it to your programs, too. When we speak of free software, we are referring to freedom, not price. Our General Public Licenses are designed to make sure that you have the freedom to distribute copies of free software (and charge for them if you wish), that you receive source code or can get it if you want it, that you can change the software or use pieces of it in new free programs, and that you know you can do these things. To protect your rights, we need to prevent others from denying you these rights or asking you to surrender the rights. Therefore, you have certain responsibilities if you distribute copies of the software, or if you modify it: responsibilities to respect the freedom of others. For example, if you distribute copies of such a program, whether gratis or for a fee, you must pass on to the recipients the same freedoms that you received. You must make sure that they, too, receive or can get the source code. And you must show them these terms so they know their rights. Developers that use the GNU GPL protect your rights with two steps: (1) assert copyright on the software, and (2) offer you this License giving you legal permission to copy, distribute and/or modify it. For the developers' and authors' protection, the GPL clearly explains that there is no warranty for this free software. For both users' and authors' sake, the GPL requires that modified versions be marked as changed, so that their problems will not be attributed erroneously to authors of previous versions. Some devices are designed to deny users access to install or run modified versions of the software inside them, although the manufacturer can do so. This is fundamentally incompatible with the aim of protecting users' freedom to change the software. The systematic pattern of such abuse occurs in the area of products for individuals to use, which is precisely where it is most unacceptable. Therefore, we have designed this version of the GPL to prohibit the practice for those products. If such problems arise substantially in other domains, we stand ready to extend this provision to those domains in future versions of the GPL, as needed to protect the freedom of users. Finally, every program is threatened constantly by software patents. States should not allow patents to restrict development and use of software on general-purpose computers, but in those that do, we wish to avoid the special danger that patents applied to a free program could make it effectively proprietary. To prevent this, the GPL assures that patents cannot be used to render the program non-free. The precise terms and conditions for copying, distribution and modification follow.

TERMS AND CONDITIONS

0. Definitions.
"This License" refers to version 3 of the GNU General Public License.
"Copyright" also means copyright-like laws that apply to other kinds of works, such as semiconductor masks.
"The Program" refers to any copyrightable work licensed under this License. Each licensee is addressed as "you". "Licensees" and " recipients" may be individuals or organizations.
To "modify" a work means to copy from or adapt all or part of the work in a fashion requiring copyright permission, other than the making of an exact copy. The resulting work is called a "modified version" of the earlier work or a work "based on" the earlier work.
A "covered work" means either the unmodified Program or a work based on the Program.
To "propagate" a work means to do anything with it that, without permission, would make you directly or secondarily liable for infringement under applicable copyright law, except executing it on a computer or modifying a private copy. Propagation includes copying, distribution (with or without modification), making available to the public, and in some countries other activities as well.
To "convey" a work means any kind of propagation that enables other parties to make or receive copies. Mere interaction with a user through a computer network, with no transfer of a copy, is not conveying.
An interactive user interface displays "Appropriate Legal Notices" to the extent that it includes a convenient and prominently visible feature that (1) displays an appropriate copyright notice, and (2) tells the user that there is no warranty for the work (except to the extent that warranties are provided), that licensees may convey the work under this License, and how to view a copy of this License. If the interface presents a list of user commands or options, such as a menu, a prominent item in the list meets this criterion.

1. Source Code.
The "source code" for a work means the preferred form of the work for making modifications to it. "Object code" means any nonsource form of a work.
A "Standard Interface" means an interface that either is an official standard defined by a recognized standards body, or, in the case of interfaces specified for a particular programming language, one that is widely used among developers working in that language.
The "System Libraries" of an executable work include anything, other than the work as a whole, that (a) is included in the normal form of packaging a Major Component, but which is not part of that Major Component, and (b) serves only to enable use of the work with that Major Component, or to implement a Standard Interface for which an implementation is available to the public in source code form. A "Major Component", in this context, means a major essential component (kernel, window system, and so on) of the

specific operating system (if any) on which the executable work runs, or a compiler used to produce the work, or an object code interpreter used to run it.

The "Corresponding Source" for a work in object code form means all the source code needed to generate, install, and (for an executable work) run the object code and to modify the work, including scripts to control those activities. However, it does not include the work's System Libraries, or general-purpose tools or generally available free programs which are used unmodified in performing those activities but which are not part of the work. For example, Corresponding Source includes interface definition files associated with source files for the work, and the source code for shared libraries and dynamically linked subprograms that the work is specifically designed to require, such as by intimate data communication or control flow between those subprograms and other parts of the work.

The Corresponding Source need not include anything that users can regenerate automatically from other parts of the Corresponding Source.

The Corresponding Source for a work in source code form is that same work.

2. Basic Permissions.

All rights granted under this License are granted for the term of copyright on the Program, and are irrevocable provided the stated conditions are met. This License explicitly affirms your unlimited permission to run the unmodified Program. The output from running a covered work is covered by this License only if the output, given its content, constitutes a covered work. This License acknowledges your rights of fair use or other equivalent, as provided by copyright law. You may make, run and propagate covered works that you do not convey, without conditions so long as your license otherwise remains in force. You may convey covered works to others for the sole purpose of having them make modifications exclusively for you, or provide you with facilities for running those works, provided that you comply with the terms of this License in conveying all material for which you do not control copyright. Those thus making or running the covered works for you must do so exclusively on your behalf, under your direction and control, on terms that prohibit them from making any copies of your copyrighted material outside their relationship with you.

Conveying under any other circumstances is permitted solely under the conditions stated below. Sublicensing is not allowed; section 10 makes it unnecessary.

3. Protecting Users' Legal Rights From Anti-Circumvention Law.

No covered work shall be deemed part of an effective technological measure under any applicable law fulfilling obligations under article 11 of the WIPO copyright treaty adopted on 20 December 1996, or similar laws prohibiting or restricting circumvention of such measures. When you convey a covered work, you waive any legal power to forbid circumvention of technological measures to the extent such circumvention is effected by exercising rights under this License with respect to the covered work, and you disclaim any intention to limit operation or modification of the work as a means of enforcing, against the work's users, your or third parties' legal rights to forbid circumvention of technological measures.

4. Conveying Verbatim Copies.

You may convey verbatim copies of the Program's source code as you receive it, in any medium, provided that you conspicuously and appropriately publish on each copy an appropriate copyright notice; keep intact all notices stating that this License and any nonpermissive terms added in accord with section 7 apply to the code; keep intact all notices of the absence of any warranty; and give all recipients a copy of this License along with the Program.

You may charge any price or no price for each copy that you convey, and you may offer support or warranty protection for a fee.

5. Conveying Modified Source Versions.

You may convey a work based on the Program, or the modifications to produce it from the Program, in the form of source code under the terms of section 4, provided that you also meet all of these conditions:

a) The work must carry prominent notices stating that you modified it, and giving a relevant date.

b) The work must carry prominent notices stating that it is released under this License and any conditions added under section 7. This requirement modifies the requirement in section 4 to "keep intact all notices".

c) You must license the entire work, as a whole, under this License to anyone who comes into possession of a copy. This License will therefore apply, along with any applicable section 7 additional terms, to the whole of the work, and all its parts, regardless of how they are packaged. This License gives no permission to license the work in any other way, but it does not invalidate such permission if you have separately received it.

d) If the work has interactive user interfaces, each must display Appropriate Legal Notices; however, if the Program has interactive interfaces that do not display Appropriate Legal Notices, your work need not make them do so.

A compilation of a covered work with other separate and independent works, which are not by their nature extensions of the covered work, and which are not combined with it such as to form a larger program, in or on a volume of a storage or distribution medium, is called an "aggregate" if the compilation and its resulting copyright are not used to limit the access or legal rights of the compilation's users beyond what the individual works permit. Inclusion of a covered work in an aggregate does not cause this License to apply to the other parts of the aggregate.

6. Conveying Non-Source Forms.

You may convey a covered work in object code form under the terms of sections 4 and 5, provided that you also convey the machinereadable

Corresponding Source under the terms of this License, in one of these ways:

a) Convey the object code in, or embodied in, a physical product (including a physical distribution medium), accompanied by the Corresponding Source fixed on a durable physical medium customarily used for software interchange.

b) Convey the object code in, or embodied in, a physical product (including a physical distribution medium), accompanied by a written offer, valid for at least three years and valid for as long as you offer spare parts or customer support for that product model, to give anyone who possesses the object code either (1) a copy of the Corresponding Source for all the software in the product that is covered by this License, on a durable physical medium customarily used for software interchange, for a price no more than your reasonable cost of physically performing this conveying of source, or (2) access to copy the Corresponding Source from a network server at no charge.

c) Convey individual copies of the object code with a copy of the written offer to provide the Corresponding Source. This alternative is allowed only occasionally and noncommercially, and only if you received the object code with such an offer, in accord with subsection 6b.

d) Convey the object code by offering access from a designated place (gratis or for a charge), and offer equivalent access to the Corresponding Source in the same way through the same place at no further charge. You need not require recipients to copy the Corresponding Source along with the object code. If the place to copy the object code is a network server, the Corresponding Source may be on a different server (operated by you or a third party) that supports equivalent copying facilities, provided you maintain clear directions next to the object code saying where to find the Corresponding Source. Regardless of what server hosts the Corresponding Source, you remain obligated to ensure that it is available for as long as needed to satisfy these requirements.

e) Convey the object code using peer-to-peer transmission, provided you inform other peers where the object code and Corresponding Source of the work are being offered to the general public at no charge under subsection 6d. A separable portion of the object code, whose source code is excluded from the Corresponding Source as a System Library, need not be included in conveying the object code work.

A "User Product" is either (1) a "consumer product", which means any tangible personal property which is normally used for personal, family, or household purposes, or (2) anything designed or sold for incorporation into a dwelling. In determining whether a product is a consumer product, doubtful cases shall be resolved in favor of coverage. For a particular product received by a particular user, "normally used" refers to a typical or common use of that class of product, regardless of the status of the particular user or of the way in which the particular user actually uses, or expects or is expected to use, the product. A product is a consumer product regardless of whether the product has substantial commercial, industrial or non-consumer uses, unless such uses represent the only significant mode of use of the product. "Installation Information" for a User Product means any methods, procedures, authorization keys, or other information required to install and execute modified versions of a covered work in that User Product from a modified version of its Corresponding Source. The information must suffice to ensure that the continued functioning of the modified object code is in no case prevented or interfered with solely because modification has been made. If you convey an object code work under this section in, or with, or specifically for use in, a User Product, and the conveying occurs as part of a transaction in which the right of possession and use of the User Product is transferred to the recipient in perpetuity or for a fixed term (regardless of how the transaction is characterized), the Corresponding Source conveyed under this section must be accompanied by the Installation Information. But this requirement does not apply if neither you nor any third party retains the ability to install modified object code on the User Product (for example, the work has been installed in ROM). The requirement to provide Installation Information does not include a requirement to continue to provide support service, warranty, or updates for a work that has been modified or installed by the recipient, or for the User Product in which it has been modified or installed. Access to a network may be denied when the modification itself materially and adversely affects the operation of the network or violates the rules and protocols for communication across the network. Corresponding Source conveyed, and Installation Information provided, in accord with this section must be in a format that is publicly documented (and with an implementation available to the public in source code form), and must require no special password or key for unpacking, reading or copying.

7. Additional Terms.

"Additional permissions" are terms that supplement the terms of this License by making exceptions from one or more of its conditions. Additional permissions that are applicable to the entire Program shall be treated as though they were included in this License, to the extent that they are valid under applicable law. If additional permissions apply only to part of the Program, that part may be used separately under those permissions, but the entire Program remains governed by this License without regard to the additional permissions.

When you convey a copy of a covered work, you may at your option remove any additional permissions from that copy, or from any part of it. (Additional permissions may be written to require their own removal in certain cases when you modify the work.) You may place additional permissions on material, added by you to a covered work, for which you have or can give appropriate copyright permission. Notwithstanding any other provision of this License, for material you add to a covered work, you may (if authorized by the copyright holders of that material) supplement the terms of this License with terms:

a) Disclaiming warranty or limiting liability differently from the terms of sections 15 and 16 of this License; or

b) Requiring preservation of specified reasonable legal notices or author attributions in that material or in the Appropriate Legal Notices displayed by works containing it; or

c) Prohibiting misrepresentation of the origin of that material, or requiring that modified versions of such material be marked in reasonable ways as different from the original version; or

d) Limiting the use for publicity purposes of names of licensors or authors of the material; or

e) Declining to grant rights under trademark law for use of some trade names, trademarks, or service marks; or

f) Requiring indemnification of licensors and authors of that material by anyone who conveys the material (or modified versions of it) with contractual assumptions of liability to the recipient, for any liability that these contractual assumptions directly impose on those licensors and authors.

All other non-permissive additional terms are considered "further restrictions" within the meaning of section 10. If the Program as you received it, or any part of it, contains a notice stating that it is governed by this License along with a term that is a further restriction, you may remove that term. If a license document contains a further restriction but permits relicensing or conveying under this License, you may add to a covered work material governed by the terms of that license document, provided that the further restriction does not survive such relicensing or conveying.

If you add terms to a covered work in accord with this section, you must place, in the relevant source files, a statement of theadditional terms that apply to those files, or a notice indicating where to find the applicable terms. Additional terms, permissive or non-permissive, may be stated in the form of a separately written license, or stated as exceptions; the above requirements apply either way.

8. Termination.

You may not propagate or modify a covered work except as expressly provided under this License. Any attempt otherwise to propagate or modify it is void, and will automatically terminate your rights under this License (including any patent licenses granted under the third paragraph of section 11).

However, if you cease all violation of this License, then your license from a particular copyright holder is reinstated (a) provisionally, unless and until the copyright holder explicitly and finally terminates your license, and (b) permanently, if the copyright holder fails to notify you of the violation by some reasonable means prior to 60 days after the cessation. Moreover, your license from a particular

copyright holder is reinstated permanently if the copyright holder notifies you of the violation by some reasonable means, this is the first time you have received notice of violation of this License (for any work) from that copyright holder, and you cure the violation prior to 30 days after your receipt of the notice.
Termination of your rights under this section does not terminate the licenses of parties who have received copies or rights from you under this License. If your rights have been terminated and not permanently reinstated, you do not qualify to receive new licenses for the same material under section 10.

9. Acceptance Not Required for Having Copies.
You are not required to accept this License in order to receive or run a copy of the Program. Ancillary propagation of a covered work occurring solely as a consequence of using peer-to-peer transmission to receive a copy likewise does not require acceptance. However, nothing other than this License grants you permission to propagate or modify any covered work. These actions infringe copyright if you do not accept this License. Therefore, by modifying or propagating a covered work, you indicate your acceptance of this License to do so.

10. Automatic Licensing of Downstream Recipients.
Each time you convey a covered work, the recipient automatically receives a license from the original licensors, to run, modify and propagate that work, subject to this License. You are not responsible for enforcing compliance by third parties with this License.
An “entity transaction” is a transaction transferring control of an organization, or substantially all assets of one, or subdividing an organization, or merging organizations. If propagation of a covered work results from an entity transaction, each party to that transaction who receives a copy of the work also receives whatever licenses to the work the party’s predecessor in interest had or could give under the previous paragraph, plus a right to possession of the You may not impose any further restrictions on the exercise of the rights granted or affirmed under this License. For example, you may not impose a license fee, royalty, or other charge for exercise of rights granted under this License, and you may not initiate litigation (including a cross-claim or counterclaim in a lawsuit) alleging that any patent claim is infringed by making, using, selling, offering for sale, or importing the Program or any portion of it.

11. Patents.
A “contributor” is a copyright holder who authorizes use under this License of the Program or a work on which the Program is based. The work thus licensed is called the contributor’s “contributor version”.
A contributor’s “essential patent claims” are all patent claims owned or controlled by the contributor, whether already acquired or hereafter acquired, that would be infringed by some manner, permitted by this License, of making, using, or selling its contributor version, but do not include claims that would be infringed only as a consequence of further modification of the contributor version. For purposes of this definition, “control” includes the right to grant patent sublicenses in a manner consistent with the requirements of this License.
Each contributor grants you a non-exclusive, worldwide, royalty-free patent license under the contributor’s essential patent claims, to make, use, sell, offer for sale, import and otherwise run, modify and propagate the contents of its contributor version. In the following three paragraphs, a “patent license” is any express agreement or commitment, however denominated, not to enforce a patent (such as an express permission to practice a patent or covenant not to sue for patent infringement). To “grant” such a patent license to a party means to make such an agreement or commitment not to enforce a patent against the party.
If you convey a covered work, knowingly relying on a patent license, and the Corresponding Source of the work is not available for anyone to copy, free of charge and under the terms of this License, through a publicly available network server or other readily accessible means, then you must either (1) cause the Corresponding Source to be so available, or (2) arrange to deprive yourself of the benefit of the patent license for this particular work, or (3) arrange, in a manner consistent with the requirements of this License, to extend the patent license to downstream recipients. “Knowingly relying” means you have actual knowledge that, but for the patent license, your conveying the covered work in a country, or your recipient’s use of the covered work in a country, would infringe one or more identifiable patents in that country that you have reason to believe are valid.
If, pursuant to or in connection with a single transaction or arrangement, you convey, or propagate by procuring conveyance of, a covered work, and grant a patent license to some of the parties receiving the covered work authorizing them to use, propagate, modify or convey a specific copy of the covered work, then the patent license you grant is automatically extended to all recipients of the covered work and works based on it.
A patent license is “discriminatory” if it does not include within the scope of its coverage, prohibits the exercise of, or is conditioned on the non-exercise of one or more of the rights that are specifically granted under this License. You may not convey a covered work if you are a party to an arrangement with a third party that is in the business of distributing software, under which you make payment to the third party based on the extent of your activity of conveying the work, and under which the third party grants, to any of the parties who would receive the covered work from you, a discriminatory patent license (a) in connection with copies of the covered work conveyed by you (or copies made from those copies), or (b) primarily for and in connection with specific products or compilations that contain the covered work, unless you entered into that arrangement, or that patent license was granted, prior to 28 March 2007.
Nothing in this License shall be construed as excluding or limiting any implied license or other defenses to infringement that may otherwise be available to you under applicable patent law.

12. No Surrender of Others’ Freedom.
If conditions are imposed on you (whether by court order, agreement or otherwise) that contradict the conditions of this License, they do not excuse you from the conditions of this License. If you cannot convey a covered work so as to satisfy simultaneously your obligations under this License and any other pertinent obligations, then as a consequence you may not convey it at all. For example, if you agree to terms that obligate you to collect a royalty for further conveying from those to whom you convey the Program, the only way you could satisfy both those terms and this License would be to refrain entirely from conveying the Program.

13. Use with the GNU Affero General Public License.
Notwithstanding any other provision of this License, you have permission to link or combine any covered work with a work licensed under version 3 of the GNU Affero General Public License into a single combined work, and to convey the resulting work. The terms of this License will continue to apply to the part which is the covered work, but the special requirements of the GNU Affero General Public License, section 13, concerning interaction through a network will apply to the combination as such.

14. Revised Versions of this License.
The Free Software Foundation may publish revised and/or new versions of the GNU General Public License from time to time. Such new versions will be similar in spirit to the present version, but may differ in detail to address new problems or concerns.
Each version is given a distinguishing version number. If the Program specifies that a certain numbered version of the GNU General Public License “or any later version” applies to it, you have the option of following the terms and conditions either of that numbered version or of any later version published by the Free Software Foundation. If the Program does not specify a version number of the GNU General Public License, you may choose any version ever published by the Free Software Foundation.
If the Program specifies that a proxy can decide which future versions of the GNU General Public License can be used, that proxy’s public statement of acceptance of a version permanently authorizes you to choose that version for the Program.
Later license versions may give you additional or different permissions. However, no additional obligations are imposed on any author or copyright holder as a result of your choosing to follow a later version.

15. Disclaimer of Warranty.
THERE IS NO WARRANTY FOR THE PROGRAM, TO THE EXTENT PERMITTED BY APPLICABLE LAW. EXCEPT WHEN OTHERWISE STATED IN WRITING THE COPYRIGHT HOLDERS AND/OR OTHER PARTIES PROVIDE THE PROGRAM “ AS IS” WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESSED OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. THE ENTIRE RISK AS TO THE QUALITY AND PERFORMANCE OF THE PROGRAM IS WITH YOU. SHOULD THE PROGRAM PROVE DEFECTIVE, YOU ASSUME THE COST OF ALL NECESSARY SERVICING, REPAIR OR CORRECTION.

16. Limitation of Liability.
IN NO EVENT UNLESS REQUIRED BY APPLICABLE LAW OR AGREED TO IN WRITING WILL ANY COPYRIGHT HOLDER, OR ANY OTHER PARTY WHO MODIFIES AND/OR CONVEYS THE PROGRAM AS PERMITTED ABOVE, BE LIABLE TO YOU FOR DAMAGES, INCLUDING ANY GENERAL, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF THE USE OR INABILITY TO USE THE PROGRAM (INCLUDING BUT NOT LIMITED TO LOSS OF DATA OR DATA BEING RENDERED INACCURATE OR LOSSES SUSTAINED BY YOU OR THIRD PARTIES OR A FAILURE OF THE PROGRAM TO OPERATE WITH ANY OTHER PROGRAMS), EVEN IF SUCH HOLDER OR OTHER PARTY HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

17. Interpretation of Sections 15 and 16.
If the disclaimer of warranty and limitation of liability provided above cannot be given local legal effect according to their terms, reviewing courts shall apply local law that most closely approximates an absolute waiver of all civil liability in connection with the Program, unless a warranty or assumption of liability accompanies a copy of the Program in return for a fee.

How to Apply These Terms to Your New Programs

If you develop a new program, and you want it to be of the greatest possible use to the public, the best way to achieve this is to make it free software which everyone can redistribute and change under these terms. To do so, attach the following notices to the program. It is safest to attach them to the start of each source file to most effectively state theexclusion of warranty; and each file should have at least the “copyright” line and a pointer to where the full notice is found.

> <one line to give the program’s name and a brief idea of what it does.> Copyright (C) <year> <name of author>
> This program is free software: you can redistribute it and/or modify it under the terms of the GNU General Public License as published by the Free Software Foundation, either version 3 of the License, or (at your option) any later version.
> This program is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU General Public License for more details.
> You should have received a copy of the GNU General Public License along with this program. If not, see <http://www.gnu.org/licenses/>.

Also add information on how to contact you by electronic and paper mail.
If the program does terminal interaction, make it output a short notice like this when it starts in an interactive mode:

> <program> Copyright (C) <year> <name of author> This program comes with ABSOLUTELY NO WARRANTY; for details type `show w’.
> This is free software, and you are welcome to redistribute it under certain conditions; type `show c’ for details.

The hypothetical commands `show w’ and `show c’ should show the appropriate parts of the General Public License. Of course, your program’s commands might be different; for a GUI interface, you would use an “about box”.
You should also get your employer (if you work as a programmer) or school, if any, to sign a “copyright disclaimer” for the program, if necessary.
For more information on this, and how to apply and follow the GNU GPL, see <http://www.gnu.org/licenses/>.The GNU General Public License does not permit incorporating your program into proprietary programs. If your program is a subroutine library, you may consider it more useful to permit linking proprietary applications with the library. If this is what you want to do, use the GNU Lesser General Public License instead of this License. But first, please read <http://www.gnu.org/philosophy/why-not-lgpl.html>.

❑ GNU Lesser General Public License (LGPL)

GNU GENERAL PUBLIC LICENSE

Version 3, 29 June 2007

Copyright (C) 2007 Free Software Foundation, Inc. <http://fsf.org/>
Everyone is permitted to copy and distribute verbatim copies of this license document, but changing it is not allowed.

Preamble

The GNU General Public License is a free, copyleft license for software and other kinds of works.

The licenses for most software and other practical works are designed to take away your freedom to share and change the works. By contrast, the GNU General Public License is intended to guarantee your freedom to share and change all versions of a program--to make sure it remains free software for all its users. We, the Free Software Foundation, use the GNU General Public License for most of our software; it applies also to any other work released this way by its authors. You can apply it to your programs, too.
When we speak of free software, we are referring to freedom, not price. Our General Public Licenses are designed to make sure that you have the freedom to distribute copies of free software (and charge for them if you wish), that you receive source code or can get it if you want it, that you can change the software or use pieces of it in new free programs, and that you know you can do these things.
To protect your rights, we need to prevent others from denying you these rights or asking you to surrender the rights. Therefore, you have certain responsibilities if you distribute copies of the software, or if you modify it: responsibilities to respect the freedom of others.
For example, if you distribute copies of such a program, whether gratis or for a fee, you must pass on to the recipients the same freedoms that you received. You must make sure that they, too, receive or can get the source code. And you must show them these terms so they know their rights.
Developers that use the GNU GPL protect your rights with two steps: (1) assert copyright on the software, and (2) offer you this License giving you legal permission to copy, distribute and/or modify it.
For the developers' and authors' protection, the GPL clearly explains that there is no warranty for this free software. For both users' and authors' sake, the GPL requires that modified versions be marked as changed, so that their problems will not be attributed erroneously to authors of previous versions.
Some devices are designed to deny users access to install or run modified versions of the software inside them, although the manufacturer can do so. This is fundamentally incompatible with the aim of protecting users' freedom to change the software. The systematic pattern of such abuse occurs in the area of products for individuals to use, which is precisely where it is most unacceptable. Therefore, we have designed this version of the GPL to prohibit the practice for those products. If such problems arise substantially in other domains, we stand ready to extend this provision to those domains in future versions of the GPL, as needed to protect the freedom of users. Finally, every program is threatened constantly by software patents. States should not allow patents to restrict development and use of software on general-purpose computers, but in those that do, we wish to avoid the special danger that patents applied to a free program could make it effectively proprietary. To prevent this, the GPL assures that patents cannot be used to render the program non-free. The precise terms and conditions for copying, distribution and modification follow.

TERMS AND CONDITIONS

0. Definitions.
"This License" refers to version 3 of the GNU General Public License.
"Copyright" also means copyright-like laws that apply to other kinds of works, such as semiconductor masks.
"The Program" refers to any copyrightable work licensed under this License. Each licensee is addressed as "you". "Licensees" and " recipients" may be individuals or organizations.
To "modify" a work means to copy from or adapt all or part of the work in a fashion requiring copyright permission, other than the making of an exact copy. The resulting work is called a "modified version" of the earlier work or a work "based on" the earlier work.
A "covered work" means either the unmodified Program or a work based on the Program.
To "propagate" a work means to do anything with it that, without permission, would make you directly or secondarily liable for infringement under applicable copyright law, except executing it on a computer or modifying a private copy. Propagation includes copying, distribution (with or without modification), making available to the public, and in some countries other activities as well.
To "convey" a work means any kind of propagation that enables other parties to make or receive copies. Mere interaction with a user through a computer network, with no transfer of a copy, is not conveying.
An interactive user interface displays "Appropriate Legal Notices" to the extent that it includes a convenient and prominently visible feature that (1) displays an appropriate copyright notice, and (2) tells the user that there is no warranty for the work (except to the extent that warranties are provided), that licensees may convey the work under this License, and how to view a copy of this License. If the interface presents a list of user commands or options, such as a menu, a prominent item in the list meets this criterion.

1. Source Code.
The "source code" for a work means the preferred form of the work for making modifications to it. "Object code" means any nonsource form of a work.
A "Standard Interface" means an interface that either is an official standard defined by a recognized standards body, or, in the case of interfaces specified for a particular programming language, one that is widely used among developers working in that language.
The "System Libraries" of an executable work include anything, other than the work as a whole, that (a) is included in the normal form of packaging a Major Component, but which is not part of that Major Component, and (b) serves only to enable use of the work with that Major Component, or to implement a Standard Interface for which an implementation is available to the public in source code form. A "Major Component", in this context, means a major essential component (kernel, window system, and so on) of the specific operating system (if any) on which the executable work runs, or a compiler used to produce the work, or an object code interpreter used to run it. The "Corresponding Source" for a work in object code form means all the source code needed to generate, install, and (for an executable work) run the object code and to modify the work, including scripts to control those activities. However, it does not include the work's System Libraries, or general-purpose tools or generally available free programs which are used unmodified in performing those activities but which are not part of the work. For example, Corresponding Source includes interface definition files associated with source files for the work, and the source code for shared libraries and dynamically linked

subprograms that the work is specifically designed to require, such as by intimate data communication or control flow between those subprograms and other parts of the work. The Corresponding Source need not include anything that users can regenerate automatically from other parts of the Corresponding Source. The Corresponding Source for a work in source code form is that same work.

2. Basic Permissions.
All rights granted under this License are granted for the term of copyright on the Program, and are irrevocable provided the stated conditions are met. This License explicitly affirms your unlimited permission to run the unmodified Program. The output from running a covered work is covered by this License only if the output, given its content, constitutes a covered work. This License acknowledges your rights of fair use or other equivalent, as provided by copyright law. You may make, run and propagate covered works that you do not convey, without conditions so long as your license otherwise remains in force. You may convey covered works to others for the sole purpose of having them make modifications exclusively for you, or provide you with facilities for running those works, provided that you comply with the terms of this License in conveying all material for which you do not control copyright. Those thus making or running the covered works for you must do so exclusively on your behalf, under your direction and control, on terms that prohibit them from making any copies of your copyrighted material outside their relationship with you. Conveying under any other circumstances is permitted solely under the conditions stated below. Sublicensing is not allowed; section 10 makes it unnecessary.

3. Protecting Users' Legal Rights From Anti-Circumvention Law.
No covered work shall be deemed part of an effective technological measure under any applicable law fulfilling obligations under article 11 of the WIPO copyright treaty adopted on 20 December 1996, or similar laws prohibiting or restricting circumvention of such measures. When you convey a covered work, you waive any legal power to forbid circumvention of technological measures to the extent such circumvention is effected by exercising rights under this License with respect to the covered work, and you disclaim any intention to limit operation or modification of the work as a means of enforcing, against the work's users, your or third parties' legal rights to forbid circumvention of technological measures.

4. Conveying Verbatim Copies.
You may convey verbatim copies of the Program's source code as you receive it, in any medium, provided that you conspicuously and appropriately publish on each copy an appropriate copyright notice; keep intact all notices stating that this License and any nonpermissive terms added in accord with section 7 apply to the code; keep intact all notices of the absence of any warranty; and give all recipients a copy of this License along with the Program. You may charge any price or no price for each copy that you convey, and you may offer support or warranty protection for a fee.

5. Conveying Modified Source Versions. You may convey a work based on the Program, or the modifications to produce it from the Program, in the form of source code under the terms of section 4, provided that you also meet all of these conditions:

a) The work must carry prominent notices stating that you modified it, and giving a relevant date.

b) The work must carry prominent notices stating that it is released under this License and any conditions added under section 7. This requirement modifies the requirement in section 4 to "keep intact all notices".

c) You must license the entire work, as a whole, under this License to anyone who comes into possession of a copy. This License will therefore apply, along with any applicable section 7 additional terms, to the whole of the work, and all its parts, regardless of how they are packaged. This License gives no permission to license the work in any other way, but it does not invalidate such permission if you have separately received it.

d) If the work has interactive user interfaces, each must display Appropriate Legal Notices; however, if the Program has interactive interfaces that do not display Appropriate Legal Notices, your work need not make them do so.

A compilation of a covered work with other separate and independent works, which are not by their nature extensions of the covered work, and which are not combined with it such as to form a larger program, in or on a volume of a storage or distribution medium, is called an "aggregate" if the compilation and its resulting copyright are not used to limit the access or legal rights of the compilation's users beyond what the individual works permit. Inclusion of a covered work in an aggregate does not cause this License to apply to the other parts of the aggregate.

6. Conveying Non-Source Forms.
You may convey a covered work in object code form under the terms of sections 4 and 5, provided that you also convey the machinereadable Corresponding Source under the terms of this License, in one of these ways:

a) Convey the object code in, or embodied in, a physical product (including a physical distribution medium), accompanied by the Corresponding Source fixed on a durable physical medium customarily used for software interchange.

b) Convey the object code in, or embodied in, a physical product (including a physical distribution medium), accompanied by a written offer, valid for at least three years and valid for as long as you offer spare parts or customer support for that product model, to give anyone who possesses the object code either (1) a copy of the Corresponding Source for all the software in the product that is covered by this License, on a durable physical medium customarily used for software interchange, for a price no more than your reasonable cost of physically performing this conveying of source, or (2) access to copy the Corresponding Source from a network server at no charge.

c) Convey individual copies of the object code with a copy of the written offer to provide the Corresponding Source. This alternative is allowed only occasionally and noncommercially, and only if you received the object code with such an offer, in accord with subsection 6b.

d) Convey the object code by offering access from a designated place (gratis or for a charge), and offer equivalent access to the Corresponding Source in the same way through the same place at no further charge. You need not require recipients to copy the Corresponding Source along with the object code. If the place to copy the object code is a network server, the Corresponding Source may be on a different server (operated by you or a third party) that supports equivalent copying facilities, provided you maintain clear directions next to the object code saying where to find the Corresponding Source. Regardless of what server hosts the Corresponding Source, you remain obligated to ensure that it is available for as long as needed to satisfy these requirements.

e) Convey the object code using peer-to-peer transmission, provided you inform other peers where the object code and Corresponding Source of the work are being offered to the general public at no charge under subsection 6d. A separable portion of the object code, whose source code is excluded from the Corresponding Source as a System Library, need not be included in conveying the object code work.

A "User Product" is either (1) a "consumer product", which means any tangible personal property which is normally used for personal, family, or household purposes, or (2) anything designed or sold for incorporation into a dwelling. In determining whether a product is a consumer product, doubtful cases shall be resolved in favor of coverage. For a particular product received by a particular user, "normally used" refers to a typical or common use of that class of product, regardless of the status of the particular user or of the way in which the particular user actually uses, or expects or is expected to use, the product. A product is a consumer product regardless of whether the product has substantial commercial, industrial or non-consumer uses, unless such uses represent the only significant mode of use of the product. "Installation Information" for a User Product means any methods, procedures, authorization keys, or other information required to install and execute modified versions of a covered work in that User Product from a modified version of its Corresponding Source. The information must suffice to ensure that the continued functioning of the modified object code is in no case prevented or interfered with solely because modification has been made. If you convey an object code work under this section in, or with, or specifically for use in, a User Product, and the conveying occurs as part of a transaction in which the right of possession and use of the User Product is transferred to the recipient in perpetuity or for a fixed term (regardless of how the transaction is characterized), the Corresponding Source conveyed under this section must be accompanied by the Installation Information. But this requirement does not apply if neither you nor any third party retains the ability to install modified object code on the User Product (for example, the work has been installed in ROM). The requirement to provide Installation Information does not include a requirement to continue to provide support service, warranty, or updates for a work that has been modified or installed by the recipient, or for the User Product in which it has been modified or installed. Access to a network may be denied when the modification itself materially and adversely affects the operation of the network or violates the rules and protocols for communication across the network. Corresponding Source conveyed, and Installation Information provided, in accord with this section must be in a format that is publicly documented (and with an implementation available to the public in source code form), and must require no special password or key for unpacking, reading or copying.

7. Additional Terms.

"Additional permissions" are terms that supplement the terms of this License by making exceptions from one or more of its conditions. Additional permissions that are applicable to the entire Program shall be treated as though they were included in this License, to the extent that they are valid under applicable law. If additional permissions apply only to part of the Program, that part may be used separately under those permissions, but the entire Program remains governed by this License without regard to the additional permissions.

When you convey a copy of a covered work, you may at your option remove any additional permissions from that copy, or from any part of it. (Additional permissions may be written to require their own removal in certain cases when you modify the work.) You may place additional permissions on material, added by you to a covered work, for which you have or can give appropriate copyright permission. Notwithstanding any other provision of this License, for material you add to a covered work, you may (if authorized by the copyright holders of that material) supplement the terms of this License with terms:

a) Disclaiming warranty or limiting liability differently from the terms of sections 15 and 16 of this License; or

b) Requiring preservation of specified reasonable legal notices or author attributions in that material or in the Appropriate Legal Notices displayed by works containing it; or

c) Prohibiting misrepresentation of the origin of that material, or requiring that modified versions of such material be marked in reasonable ways as different from the original version; or

d) Limiting the use for publicity purposes of names of licensors or authors of the material; or

e) Declining to grant rights under trademark law for use of some trade names, trademarks, or service marks; or

f) Requiring indemnification of licensors and authors of that material by anyone who conveys the material (or modified versions of it) with contractual assumptions of liability to the recipient, for any liability that these contractual assumptions directly impose on those licensors and authors.

All other non-permissive additional terms are considered "further restrictions" within the meaning of section 10. If the Program as you received it, or any part of it, contains a notice stating that it is governed by this License along with a term that is a further restriction, you may remove that term. If a license document contains a further restriction but permits relicensing or conveying under this License, you may add to a covered work material governed by the terms of that license document, provided that the further restriction does not survive such relicensing or conveying. If you add terms to a covered work in accord with this section, you must place, in the relevant source files, a statement of the additional terms that apply to those files, or a notice indicating where to find the applicable terms. Additional terms, permissive or non-permissive, may be stated in the form of a separately written license, or stated as exceptions; the above requirements apply either way.

8. Termination.

You may not propagate or modify a covered work except as expressly provided under this License. Any attempt otherwise to propagate or modify it is void, and will automatically terminate your rights under this License (including any patent licenses granted under the third paragraph of section 11). However, if you cease all violation of this License, then your license from a particular copyright holder is reinstated (a) provisionally, unless and until the copyright holder explicitly and finally terminates your license, and (b) permanently, if the copyright holder fails to notify you of the violation by some reasonable means prior to 60 days after the cessation. Moreover, your license from a particular copyright holder is reinstated permanently if the copyright holder notifies you of the violation by some reasonable means, this is the first time you have received notice of violation of this License (for any work) from that copyright holder, and you cure the violation prior to 30 days after your receipt of the notice. Termination of your rights under this section does not terminate the licenses of parties who have received copies or rights from you under this License. If your rights have been terminated and not permanently reinstated, you do not qualify to receive new licenses for the same material under section 10.

9. Acceptance Not Required for Having Copies.
You are not required to accept this License in order to receive or run a copy of the Program. Ancillary propagation of a covered work occurring solely as a consequence of using peer-to-peer transmission to receive a copy likewise does not require acceptance. However, nothing other than this License grants you permission to propagate or modify any covered work. These actions infringe copyright if you do not accept this License. Therefore, by modifying or propagating a covered work, you indicate your acceptance of this License to do so.

10. Automatic Licensing of Downstream Recipients.
Each time you convey a covered work, the recipient automatically receives a license from the original licensors, to run, modify and propagate that work, subject to this License. You are not responsible for enforcing compliance by third parties with this License.
An "entity transaction" is a transaction transferring control of an organization, or substantially all assets of one, or subdividing an organization, or merging organizations. If propagation of a covered work results from an entity transaction, each party to that transaction who receives a copy of the work also receives whatever licenses to the work the party's predecessor in interest had or could give under the previous paragraph, plus a right to possession of the Corresponding Source of the work from the predecessor in interest, if the predecessor has it or can get it with reasonable efforts. You may not impose any further restrictions on the exercise of the rights granted or affirmed under this License. For example, you may not impose a license fee, royalty, or other charge for exercise of rights granted under this License, and you may not initiate litigation (including a cross-claim or counterclaim in a lawsuit) alleging that any patent claim is infringed by making, using, selling, offering for sale, or importing the Program or any portion of it.

11. Patents.
A "contributor" is a copyright holder who authorizes use under this License of the Program or a work on which the Program is based. The work thus licensed is called the contributor's "contributor version". A contributor's "essential patent claims" are all patent claims owned or controlled by the contributor, whether already acquired or hereafter acquired, that would be infringed by some manner, permitted by this License, of making, using, or selling its contributor version, but do not include claims that would be infringed only as a consequence of further modification of the contributor version. For purposes of this definition, "control" includes the right to grant patent sublicenses in a manner consistent with the requirements of this License. Each contributor grants you a non-exclusive, worldwide, royalty-free patent license under the contributor's essential patent claims, to make, use, sell, offer for sale, import and otherwise run, modify and propagate the contents of its contributor version. In the following three paragraphs, a "patent license" is any express agreement or commitment, however denominated, not to enforce a patent (such as an express permission to practice a patent or covenant not to sue for patent infringement). To "grant" such a patent license to a party means to make such an agreement or commitment not to enforce a patent against the party. If you convey a covered work, knowingly relying on a patent license, and the Corresponding Source of the work is not available for anyone to copy, free of charge and under the terms of this License, through a publicly available network server or other readily accessible means, then you must either (1) cause the Corresponding Source to be so available, or (2) arrange to deprive yourself of the benefit of the patent license for this particular work, or (3) arrange, in a manner consistent with the requirements of this License, to extend the patent license to downstream recipients. "Knowingly relying" means you have actual knowledge that, but for the patent license, your conveying the covered work in a country, or your recipient's use of the covered work in a country, would infringe one or more identifiable patents in that country that you have reason to believe are valid. If, pursuant to or in connection with a single transaction or arrangement, you convey, or propagate by procuring conveyance of, a covered work, and grant a patent license to some of the parties receiving the covered work authorizing them to use, propagate, modify or convey a specific copy of the covered work, then the patent license you grant is automatically extended to all recipients of the covered work and works based on it.
A patent license is "discriminatory" if it does not include within the scope of its coverage, prohibits the exercise of, or is conditioned on the non-exercise of one or more of the rights that are specifically granted under this License. You may not convey a covered work if you are a party to an arrangement with a third party that is in the business of distributing software, under which you make payment to the third party based on the extent of your activity of conveying the work, and under which the third party grants, to any of the parties who would receive the covered work from you, a discriminatory patent license (a) in connection with copies of the covered work conveyed by you (or copies made from those copies), or (b) primarily for and in connection with specific products or compilations that contain the covered work, unless you entered into that arrangement, or that patent license was granted, prior to 28 March 2007.
Nothing in this License shall be construed as excluding or limiting any implied license or other defenses to infringement that may otherwise be available to you under applicable patent law.

12. No Surrender of Others' Freedom.
If conditions are imposed on you (whether by court order, agreement or otherwise) that contradict the conditions of this License, they do not excuse you from the conditions of this License. If you cannot convey a covered work so as to satisfy simultaneously your obligations under this License and any other pertinent obligations, then as a consequence you may not convey it at all. For example, if you agree to terms that obligate you to collect a royalty for further conveying from those to whom you convey the Program, the only way you could satisfy both those terms and this License would be to refrain entirely from conveying the Program.

13. Use with the GNU Affero General Public License.
Notwithstanding any other provision of this License, you have permission to link or combine any covered work with a work licensed under version 3 of the GNU Affero General Public License into a single combined work, and to convey the resulting work. The terms of this License will continue to apply to the part which is the covered work, but the special requirements of the GNU Affero General Public License, section 13, concerning interaction through a network will apply to the combination as such.

14. Revised Versions of this License.
The Free Software Foundation may publish revised and/or new versions of the GNU General Public License from time to time. Such new versions will be similar in spirit to the present version, but may differ in detail to address new problems or concerns. Each version is given a distinguishing version number. If the Program specifies that a certain numbered version of the GNU General Public License "or any later version" applies to it, you have the option of following the terms and conditions either of that numbered version or of any later version published by the Free Software Foundation. If the Program does not specify a version number of the GNU General Public License, you may choose any version ever published by the Free Software Foundation. If the Program specifies that a proxy can decide which future versions of the GNU General Public License can be used, that proxy's public statement of acceptance of a version permanently authorizes you to choose that version for the Program. Later license versions may give you additional or different permissions. However, no additional obligations are imposed on any author or copyright holder as a result of your choosing to follow a later version.

15. Disclaimer of Warranty.
THERE IS NO WARRANTY FOR THE PROGRAM, TO THE EXTENT PERMITTED BY APPLICABLE LAW. EXCEPT WHEN OTHERWISE STATED IN WRITING THE COPYRIGHT HOLDERS AND/OR OTHER PARTIES PROVIDE THE PROGRAM " AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESSED OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. THE ENTIRE RISK AS TO THE QUALITY AND PERFORMANCE OF THE PROGRAM IS WITH YOU. SHOULD THE PROGRAM PROVE DEFECTIVE, YOU ASSUME THE COST OF ALL NECESSARY SERVICING, REPAIR OR CORRECTION.

16. Limitation of Liability.
IN NO EVENT UNLESS REQUIRED BY APPLICABLE LAW OR AGREED TO IN WRITING WILL ANY COPYRIGHT HOLDER, OR ANY OTHER PARTY WHO MODIFIES AND/OR CONVEYS THE PROGRAM AS PERMITTED ABOVE, BE LIABLE TO YOU FOR DAMAGES, INCLUDING ANY GENERAL, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF THE USE OR INABILITY TO USE THE PROGRAM (INCLUDING BUT NOT LIMITED TO LOSS OF DATA OR DATA BEING RENDERED INACCURATE OR LOSSES SUSTAINED BY YOU OR THIRD PARTIES OR A FAILURE OF THE PROGRAM TO OPERATE WITH ANY OTHER PROGRAMS), EVEN IF SUCH HOLDER OR OTHER PARTY HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

17. Interpretation of Sections 15 and 16.
If the disclaimer of warranty and limitation of liability provided above cannot be given local legal effect according to their terms, reviewing courts shall apply local law that most closely approximates an absolute waiver of all civil liability in connection with the Program, unless a warranty or assumption of liability accompanies a copy of the Program in return for a fee.

❑ END OF TERMS AND CONDITIONS

How to Apply These Terms to Your New Programs

If you develop a new program, and you want it to be of the greatest possible use to the public, the best way to achieve this is to make it free software which everyone can redistribute and change under these terms. To do so, attach the following notices to the program. It is safest to attach them to the start of each source file to most effectively state the exclusion of warranty; and each file should have at least the "copyright" line and a pointer to where the full notice is found.

> <one line to give the program's name and a brief idea of what it does.> Copyright (C) <year> <name of author>
> This program is free software: you can redistribute it and/or modify it under the terms of the GNU General Public License as published by the Free Software Foundation, either version 3 of the License, or (at your option) any later version.
> This program is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU General Public License for more details.
> You should have received a copy of the GNU General Public License along with this program. If not, see <http://www.gnu.org/licenses/>.

Also add information on how to contact you by electronic and paper mail.
If the program does terminal interaction, make it output a short notice like this when it starts in an interactive mode:

> <program> Copyright (C) <year> <name of author> This program comes with ABSOLUTELY NO WARRANTY; for details type `show w'. This is free software, and you are welcome to redistribute it under certain conditions; type `show c' for details.

The hypothetical commands `show w' and `show c' should show the appropriate parts of the General Public License. Of course, your program's commands might be different; for a GUI interface, you would use an "about box".
You should also get your employer (if you work as a programmer) or school, if any, to sign a "copyright disclaimer" for the program, if necessary.
For more information on this, and how to apply and follow the GNU GPL, see <http://www.gnu.org/licenses/>.
The GNU General Public License does not permit incorporating your program into proprietary programs. If your program is a subroutine library, you may consider it more useful to permit linking proprietary applications with the library. If this is what you want to do, use the GNU Lesser General Public License instead of this License. But first, please read <http://www.gnu.org/philosophy/why-not-lgpl.html>.
The OpenSSL toolkit stays under a dual license, i.e. both the conditions of the OpenSSL License and the original SSLeay license apply to the toolkit. See below for the actual license texts. Actually both licenses are BSD-style Open Source licenses. In case of any license issues related to OpenSSL please contact openssl-core@openssl.org.

OpenSSL License

Copyright (c) 1998-2007 The OpenSSL Project. All rights reserved.
Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

1. Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
3. All advertising materials mentioning features or use of this software must display the following acknowledgment: "This product includes software developed by the OpenSSL Project for use in the OpenSSL Toolkit. (http://www.openssl.org/)"
4. The names "OpenSSL Toolkit" and "OpenSSL Project" must not be used to endorse or promote products derived from this software without prior written permission. For written permission, please contact openssl-core@openssl.org.
5. Products derived from this software may not be called "OpenSSL nor may "OpenSSL" appear in their names without prior written permission of the OpenSSL Project.
6. Redistributions of any form whatsoever must retain the following acknowledgment: "This product includes software developed by the OpenSSL Project for use in the OpenSSL Toolkit (http://www.openssl.org/)"

THIS SOFTWARE IS PROVIDED BY THE OpenSSL PROJECT ``AS IS'' AND ANY EXPRESSED OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE OpenSSL PROJECT OR ITS CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.
This product includes cryptographic software written by Eric Young (eay@cryptsoft.com). This product includes software written by Tim Hudson (tjh@cryptsoft.com).

Original SSLeay License

Copyright (C) 1995-1998 Eric Young (eay@cryptsoft.com) All rights reserved.
This package is an SSL implementation written by Eric Young (eay@cryptsoft.com). The implementation was written so as to conform with Netscapes SSL.
This library is free for commercial and non-commercial use as long as the following conditions are aheared to. The following conditions apply to all code found in this distribution, be it the RC4, RSA, lhash, DES, etc., code; not just the SSL code. The SSL documentation included with this distribution is covered by the same copyright terms except that the holder is Tim Hudson (tjh@cryptsoft.com).
Copyright remains Eric Young's, and as such any Copyright notices in the code are not to be removed. If this package is used in a product, Eric Young should be given attribution as the author of the parts of the library used. This can be in the form of a textual message at program startup or in documentation (online or textual) provided with the package.
Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

1. Redistributions of source code must retain the copyright notice, this list of conditions and the following disclaimer.
2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
3. All advertising materials mentioning features or use of this software must display the following acknowledgement: "This product includes cryptographic software written by Eric Young (eay@cryptsoft.com)" The word 'cryptographic' can be left out if the rouines from the library being used are not cryptographic related :-).
4. If you include any Windows specific code (or a derivative thereof) from the apps directory (application code) you must include an acknowledgement: "This product includes software written by Tim Hudson (tjh@cryptsoft.com)"

THIS SOFTWARE IS PROVIDED BY ERIC YOUNG ``AS IS'' AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE AUTHOR OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.
The licence and distribution terms for any publically available version or derivative of this code cannot be changed. i.e. this code cannot simply be copied and put under another distribution licence [including the GNU Public Licence.]

This page is intentionally left blank.

Contact SAMSUNG WORLDWIDE

If you have any questions or comments relating to Samsung products, please contact the SAMSUNG customer care centre.

Country	Customer Care Centre ☎	Web Site
AUSTRALIA	1300 362 603	www.samsung.com/au
CHINA	400-810-5858 010-6475 1880	www.samsung.com/cn
HONG KONG	3698-4698	www.samsung.com/hk www.samsung.com/hk_en/
INDIA	3030 8282 1800 110011 1800 3000 8282	www.samsung.com/in
INDONESIA	0800-112-8888	www.samsung.com/id
JAPAN	0120-327-527	www.samsung.com/jp
MALAYSIA	1800-88-9999	www.samsung.com/my
New zealand	0800 SAMSUNG (0800 726 786)	www.samsung.com/nz
PHILIPPINES	1-800-10-SAMSUNG(726-7864) 1-800-3-SAMSUNG(726-7864) 1-800-8-SAMSUNG(726-7864) 02-5805777	www.samsung.com/ph
SINGAPORE	1800-SAMSUNG(726-7864)	www.samsung.com/sg
SOUTH AFRICA	0860-SAMSUNG(726-7864)	www.samsung.com/za
TAIWAN	0800-329-999	www.samsung.com/tw
THAILAND	1800-29-3232 02-689-3232	www.samsung.com/th
Turkey	444 77 11	www.samsung.com/tr
U.A.E	800-SAMSUNG (726-7864) 8000-4726	www.samsung.com/ae
VIETNAM	1 800 588 889	www.samsung.com/vn

BN68-02064A-01